


DACIA DUSTER 2017>


KOD / CODE : 2025CBV060




SW13 (20Nm)




SW17 (40Nm)

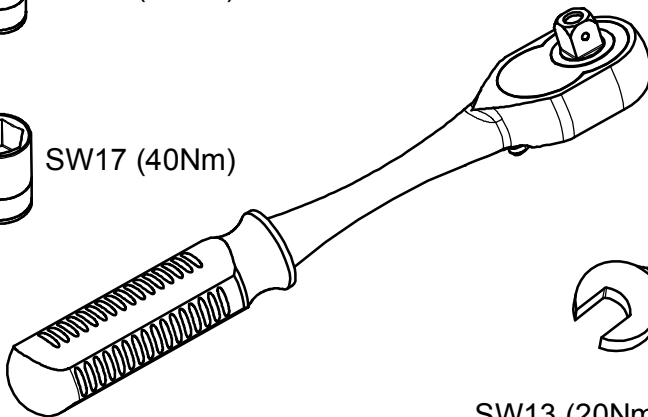

SW17 (40Nm)

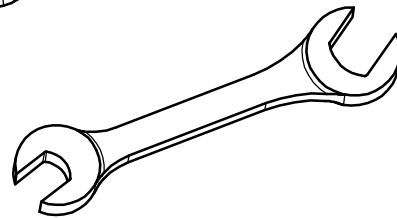


SW13 (20Nm)


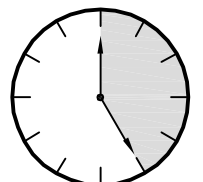


25 DAKIKA

MONTAJ SETİ / INSTALLATION SET

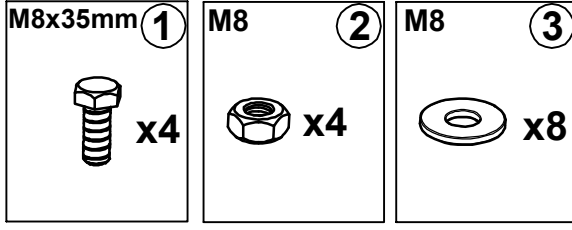

1. M8x35mm CİVATA / M8x35 BOLT
2. M8 SOMUN / M8 NUT
3. M8 PUL / M8 WASHER

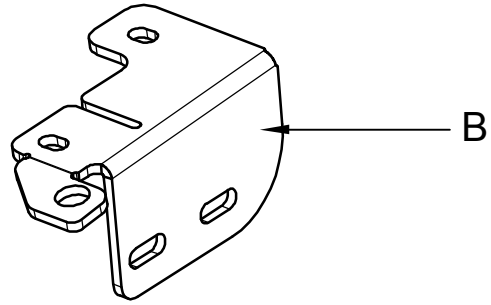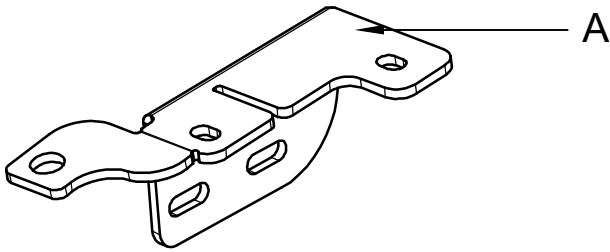

BRAKETLER / BRACKETS

- A. 2025CBV R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
B. 2025CBV L F / SOL ÖN BRAKET / LEFT FRONT BRACKET

Fig. 1



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 5



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE


Fig. 2



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 6

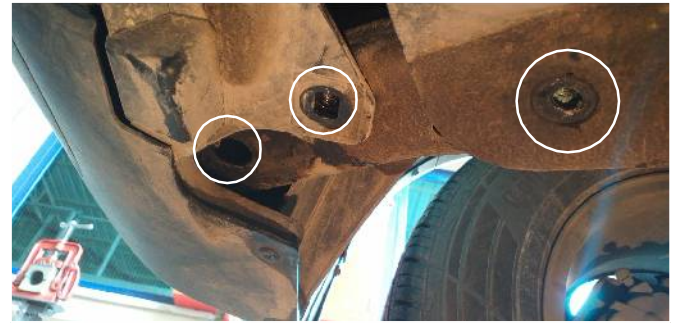

ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

Fig. 7



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

Fig. 4



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT

Fig. 8



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT



MONTAJ ŐEMASI / INSTALLATION SCHEME

