



NISSAN NAVARA 2006-2015


KOD / CODE : 5003ÖKP176

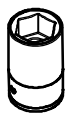

SW13 (20Nm)




SW17 (40Nm)

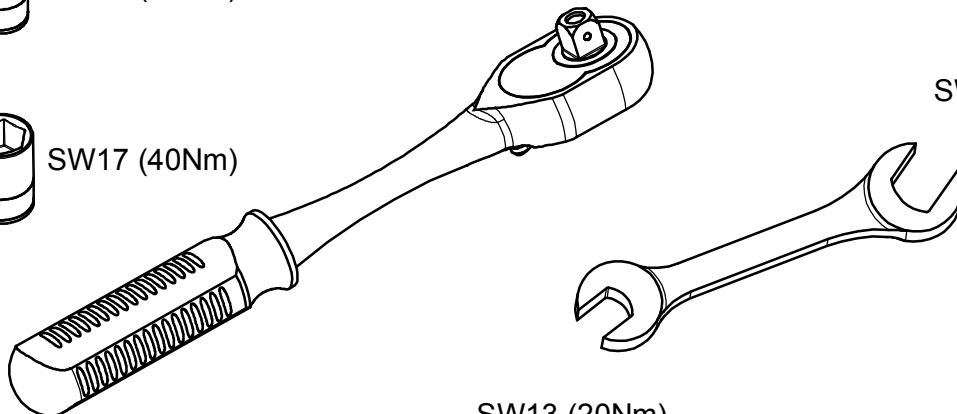


SW17 (40Nm)


SW13 (20Nm)

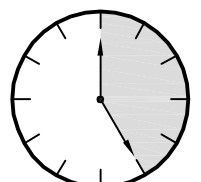

MONTAJ SETİ / INSTALLATION SET

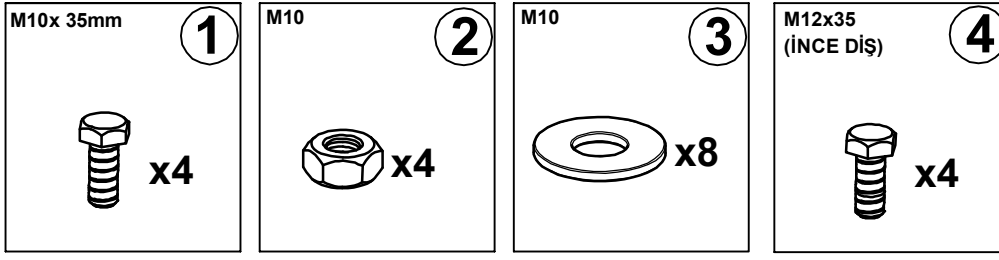

1. M10x35mm CİVATA / *M10x35mm BOLT*
2. M10 SOMUN / *M10 NUT*
3. M10 PUL / *M10 WASHER*
4. M12x35mm İNCE DİŞ CİVATA / *M10x35mm BOLT*

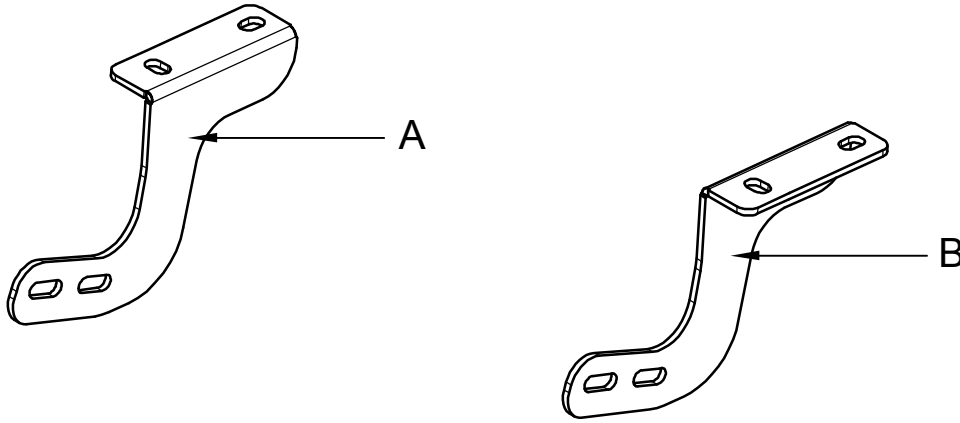

BRAKETLER / BRACKETS

- A. 5003ÖKP R F / SAĞ ÖN BRAKET / *RIGHT FRONT BRACKET*
- B. 5003ÖKP L F / SOL ÖN BRAKET / *LEFT FRONT BRACKET*

Fig. 1



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

Fig. 4



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

Fig. 2



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 5



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 3



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

Fig. 6



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT



MONTAJ ŐEMASI / INSTALLATION SCHEME

