

Q7 2009> TOUAREG 2010>


KOD / CODE : 1109BRK193




SW13 (20Nm)




SW17 (40Nm)

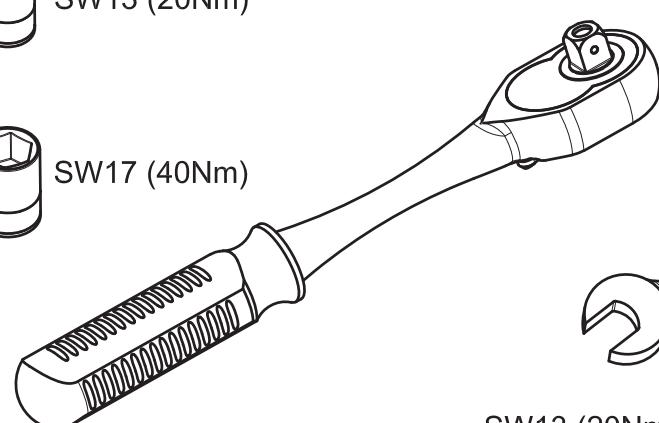




SW17 (40Nm)

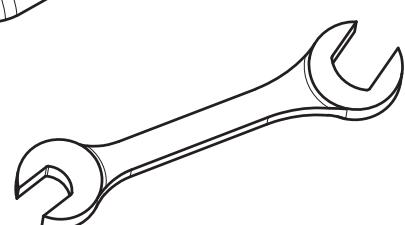





SW13 (20Nm)

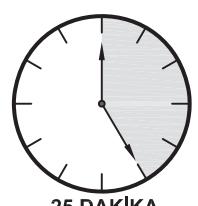

MONTAJ SETİ / INSTALLATION SET

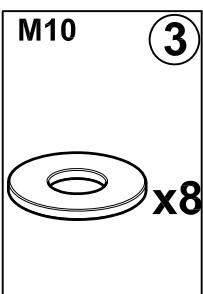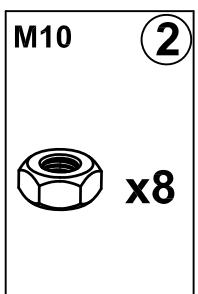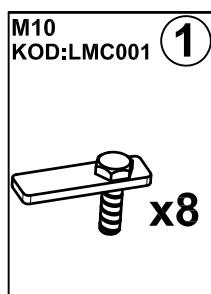

1. M10 LAMALI CİVATA / M10 MOUNTING PLATE
2. M10 SOMUN / M10 NUT
3. M10 PUL / M10 WASHER

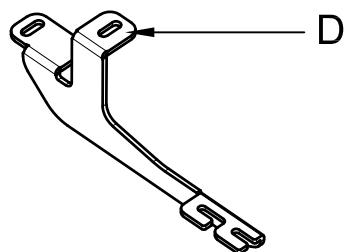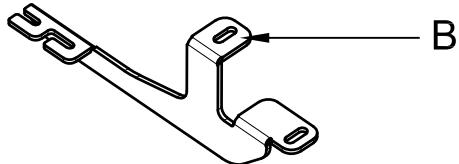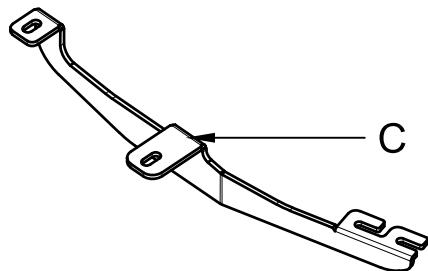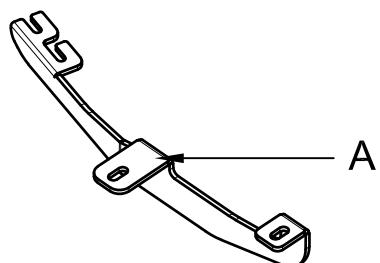

BRAKETLER / BRACKETS

- A. 1109BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 1109BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 1109BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 1109BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1



ARAÇ ÜZERİNDEKİ TAPALARI SÖKÜNÜZ.
PLEASE REMOVE THE STOPPER THAT
ALREADY ATTACHED ON THE VEHICLE

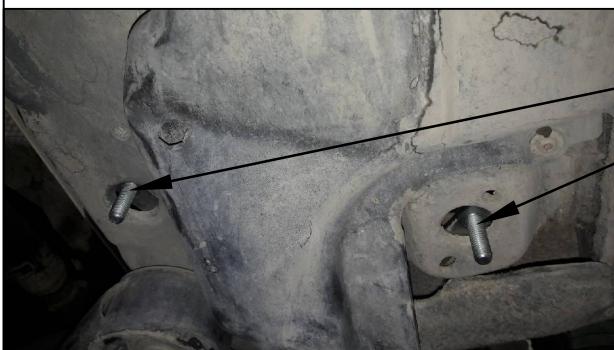


Fig. 5



MONTAJ YERLERİNİ GÖRMEK İÇİN; MUHAFAZA PLASTİĞİNDEKİ
KAPAĞI SÖKÜNÜZ DEVAMINI RESİMDEKİ GİBİ KESİNZ.
PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED
ON THE VEHICLE

Fig. 2



1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE



Fig. 6



ARAÇ ÜZERİNDEKİ TAPALARI SÖKÜNÜZ.
PLEASE REMOVE THE STOPPER THAT
ALREADY ATTACHED ON THE VEHICLE



Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 7



1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE REMOVE THE STOPPER THAT
ALREADY ATTACHED ON THE VEHICLE



Fig. 4



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

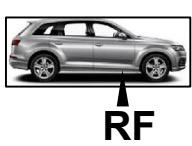


Fig. 8



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS





MONTAJ ŞEMASI / INSTALLATION SCHEME

