

CITROEN C-4 SUV


KOD / CODE : 1548BLY101




SW13 (15Nm)




SW17 (30Nm)

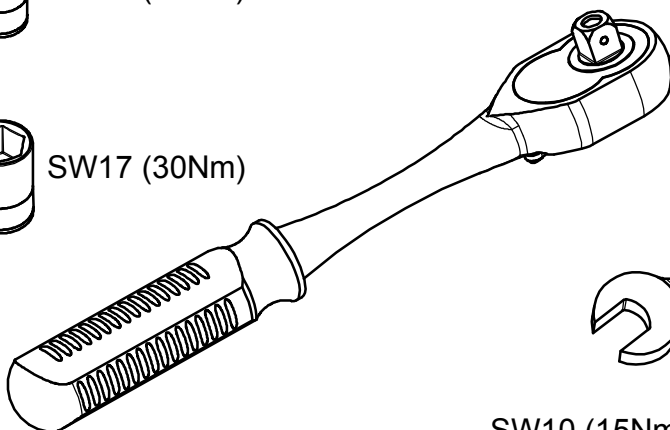

SW13 (30Nm)






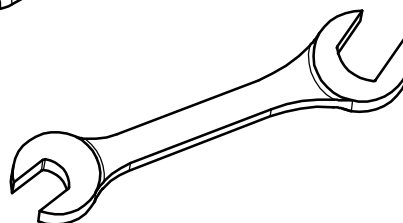


SW10 (15Nm)




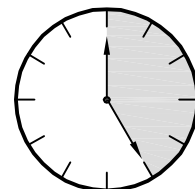


25 DAKİKA

MONTAJ SETİ / INSTALLATION SET

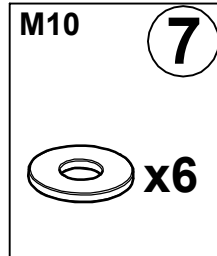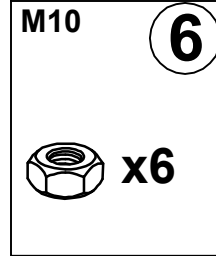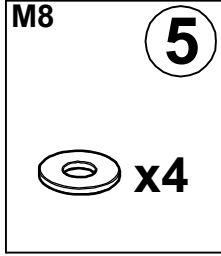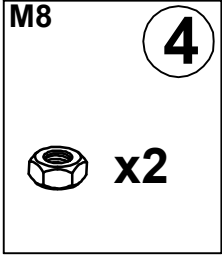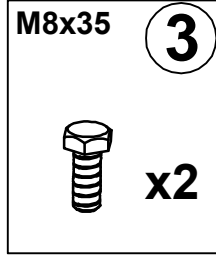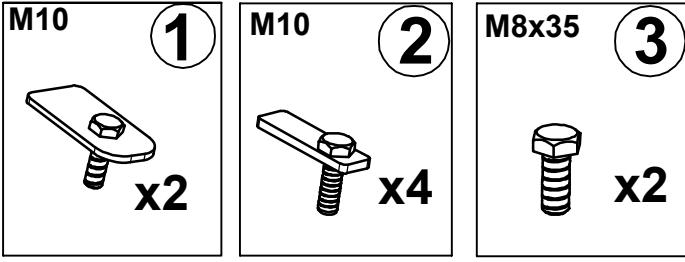

1. M10 LAMALI CİVATA / M10 MOUNTING PLATE
2. M10 LAMALI CİVATA / M10 MOUNTING PLATE
3. M8x35 ANAHTAR BAŞLI CİVATA / M8x35 KEY HEAD BOLT
4. M8 SOMUN / M8 NUT
5. M8 PUL / M8 WASHER
6. M10 SOMUN / M10 NUT
7. M10 PUL / M10 WASHER

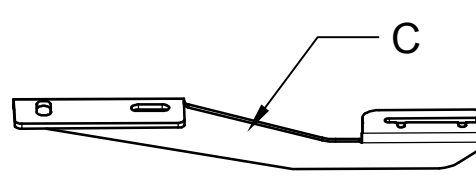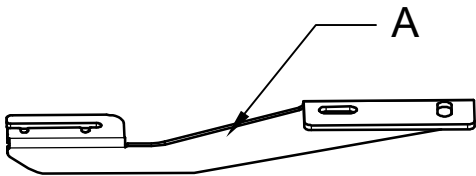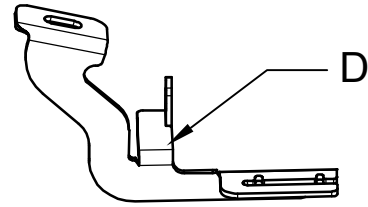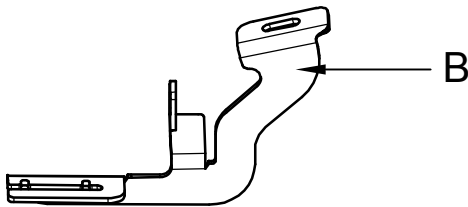

BRAKETLER / BRACKETS


- A. 1541BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 1541BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 1541BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 1541BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1




1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART 1 TO THE PLACE
SHOWN ABOVE

Fig. 5

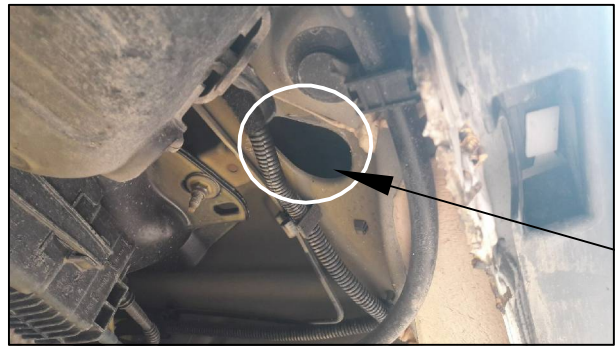


ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

Fig. 2

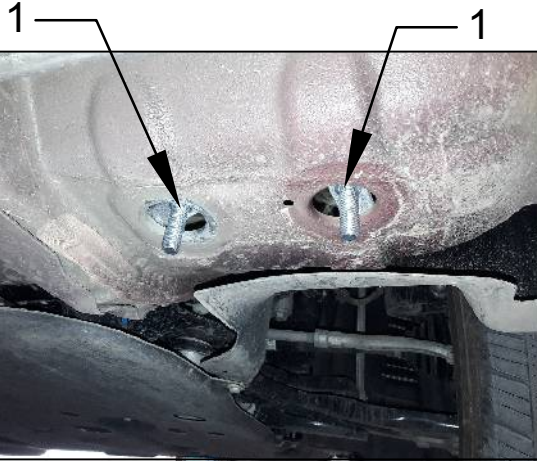

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART 1 TO THE PLACE SHOWN ABOVE

Fig. 6

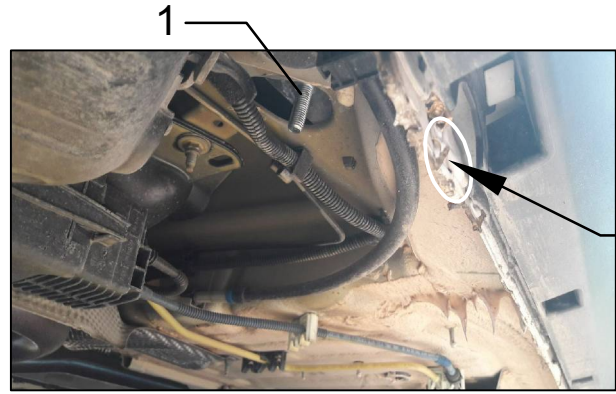

2 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 2)
TO THE PLACE SHOWN ABOVE

Fig. 3



BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS

Fig



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 4



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



MONTAJ ŞEMASI / INSTALLATION SCHEME

