


CAPTIVA 2007> ANTARA 2007>



KOD / CODE : 1602BRK173

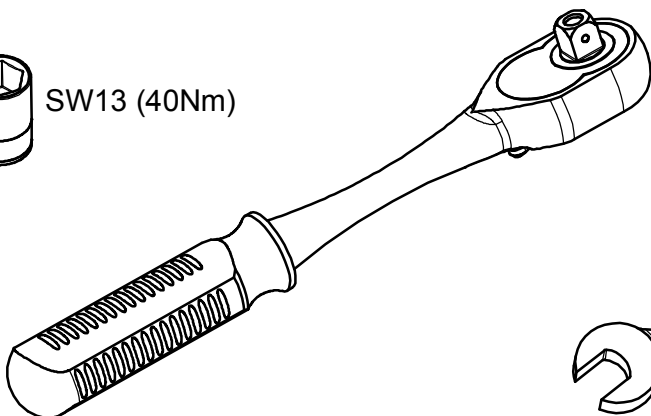




SW13 (40Nm)



SW13 (40Nm)

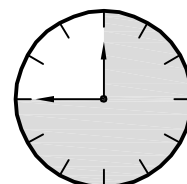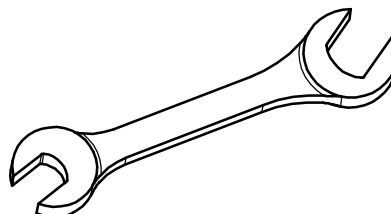







MONTAJ SETİ / INSTALLATION SET

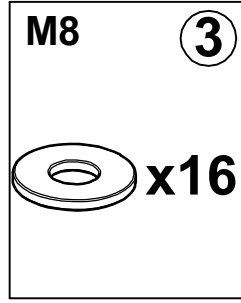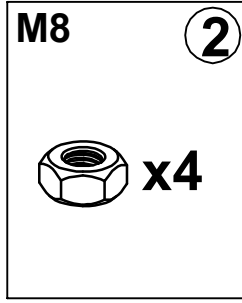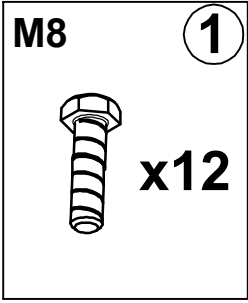

1. M8x35 ANAHTAR BAŞLI CİVATA / M8x35 KEY HEAD BOLT
2. M8 SOMUN / M8 NUT
3. M8 PUL / M8 WASHER

BRAKETLER / BRACKETS

- A. 1602BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 1602BRK R M / SAĞ ORTA BRAKET / RIGHT MIDDLE BRACKET
- C. 1602BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- D. 1602BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- E. 1602BRK L M / SOL ORTA BRAKET / LEFT MIDDLE BRACKET
- F. 1602BRK L R / SOL ARKA BRAKET / LEFT FRONT BRACKET

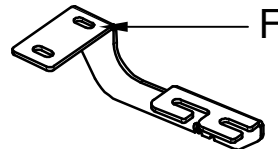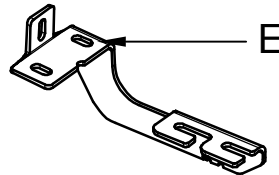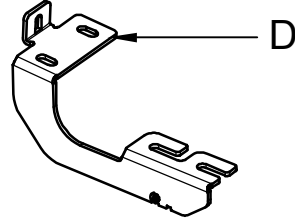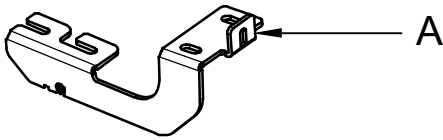

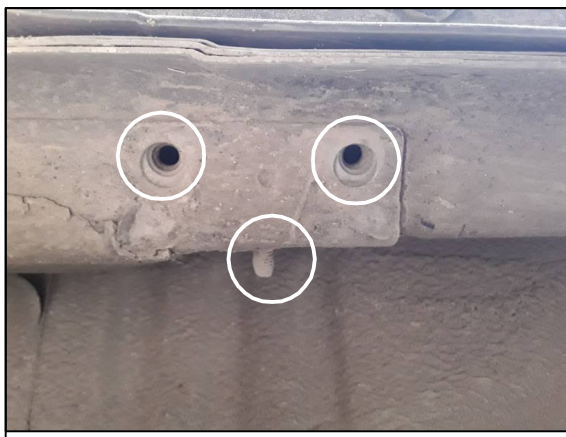


Fig. 1



LF

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT
ALREADY ATTACHED ON THE VEHICLE



Fig. 5



LM

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE



Fig. 2



LF

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE



Fig. 6



LM

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE



Fig. 3



LF

BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 7



LM

BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 4



LF

BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 8



LM

BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS




ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT
ALREADY ATTACHED ON THE VEHICLE



LR

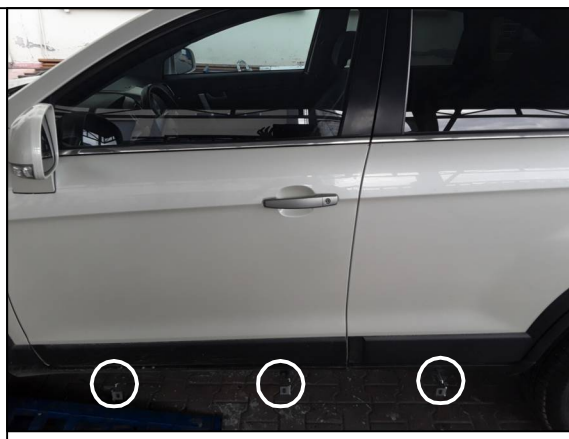

4 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART 4 TO THE
PLACE SHOWN ABOVE



LR



BRAKETİ YERİNE TAKINIZ

INSTALL THE BRACKET WITH BOLTS



LR



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT

MONTAJ ŞEMASI / INSTALLATION SCHEME

