


JEEP LIMITED 2014>


KOD / CODE : 1710BRK173



SW13 (20Nm)




SW17 (40Nm)

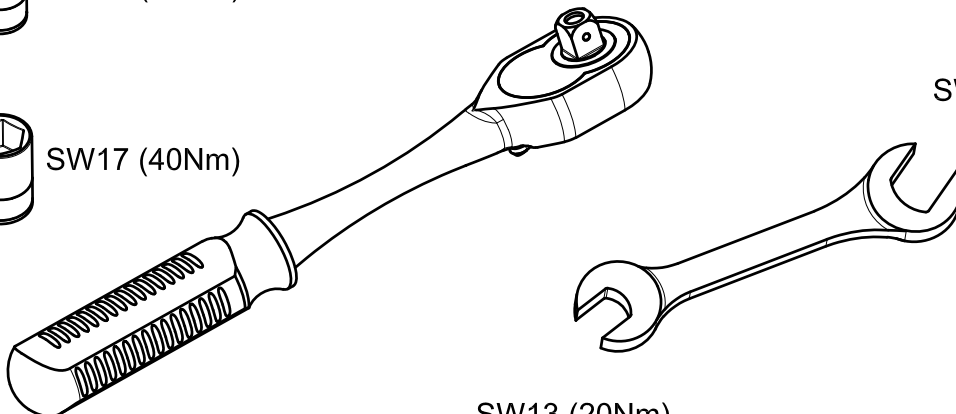


SW17 (40Nm)

SW13 (20Nm)




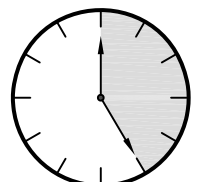


25 DAKIKA

MONTAJ SETİ / INSTALLATION SET

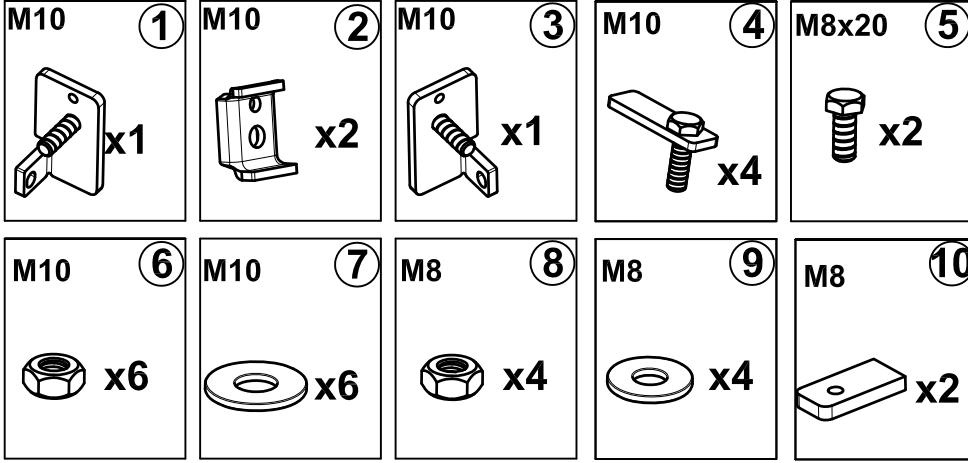

1. ETEK BAĞLANTI SAĞ / *SKIRT RING*
2. ETEK SIKMA / *SKIRTING*
3. ETEK BAĞLANTI SOL / *SKIRT RING*
4. M10 LAMALI CİVATA / *M10 MOUNTING PLATE*
5. M8x20 ANAHTAR BAŞLI CİVATA / *M8x20 KEY HEAD BOLT*
6. M10 SOMUN / *M10 NUT*
7. M10 PUL / *M10 WASHER*
8. M8 SOMUN / *M8 NUT*
9. M8 PUL / *M8 WASHER*
10. M8 SOMUN / *M8 SPECIAL NUT*

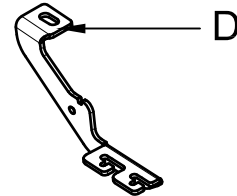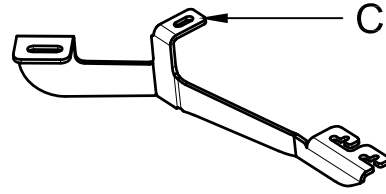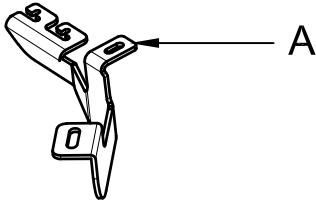

BRAKETLER / BRACKETS

- A. 1710BRK R F / SAĞ ÖN BRAKET / *RIGHT FRONT BRACKET*
- B. 1710BRK R R / SAĞ ARKA BRAKET / *RIGHT REAR BRACKET*
- C. 1710BRK L F / SOL ÖN BRAKET / *LEFT FRONT BRACKET*
- D. 1710BRK L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*



Fig. 1

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE



RF



Fig. 5

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE



RR



Fig. 2

4 ve 10 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 4-10)
TO THE PLACE SHOWN ABOVE



RF



Fig. 6

4 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 4)
TO THE PLACE SHOWN ABOVE



RR



Fig. 3

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



RF



Fig. 7

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE



RR



Fig. 4

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS




Fig. 8

ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT




MONTAJ ŞEMASI / INSTALLATION SCHEME


1710 BRK R F
BRAKET SAĞ ÖN

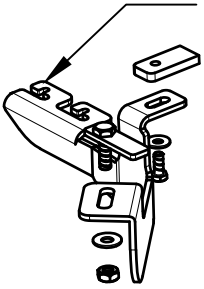

1710 BRK R R
BRAKET SAĞ ARKA

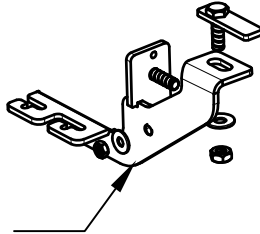

BRAKET SOL ARKA
1710 BRK L R

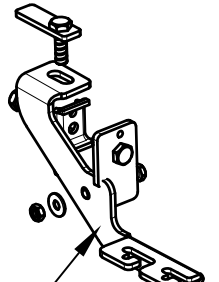

BRAKET SOL ÖN
1710 BRK L F

