

FORD RANGER 2006-2011 MAZDA BT-50 2006-2011


KOD / CODE : 2610BRK193



SW13 (20Nm)




SW17 (40Nm)

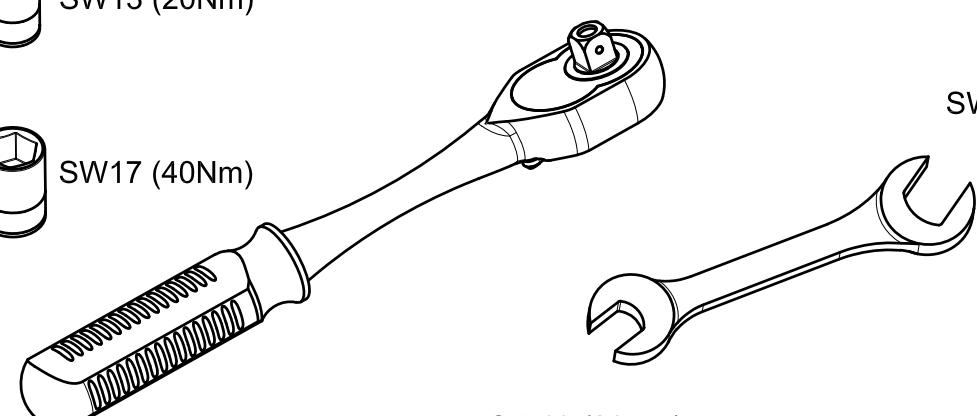

SW17 (40Nm)


SW13 (20Nm)

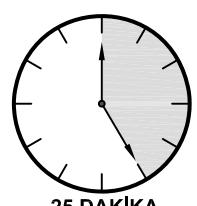


MONTAJ SETİ / INSTALLATION SET

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ


INSTALL WITH THE BOLTS ON YOUR VEHICLE

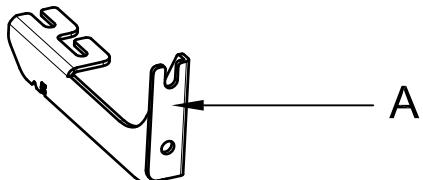


A

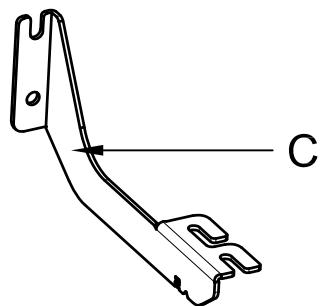

C

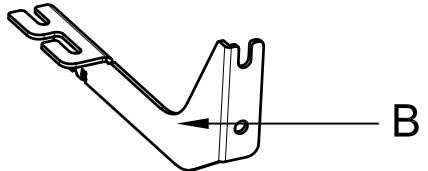

B

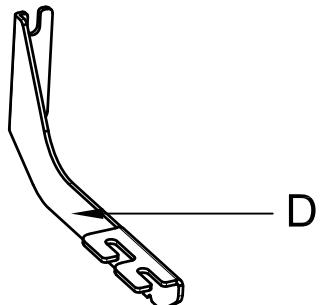

D

BRAKETLER / BRACKETS

- A. 2610BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 2610BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 2610BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 2610BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1



ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL WITH THE BOLTS ON YOUR VEHICLE

Fig. 4



ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL WITH THE BOLTS ON YOUR VEHICLE

Fig. 2



ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL WITH THE BOLTS ON YOUR VEHICLE

Fig. 5



ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL WITH THE BOLTS ON YOUR VEHICLE

Fig. 3



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT

Fig. 6



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT



MONTAJ ŞEMASI / INSTALLATION SCHEME

