



NISSAN NAVARA 2016>


KOD / CODE : 5003BRK203

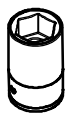

SW13 (20Nm)




SW17 (40Nm)

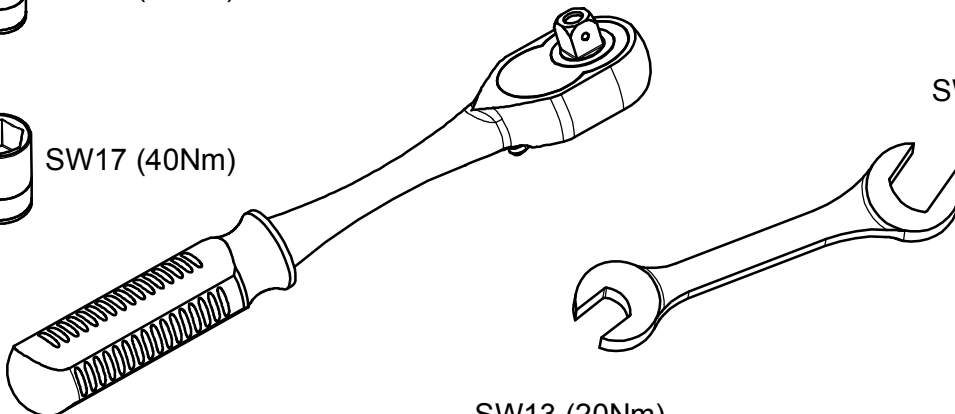


SW17 (40Nm)







SW13 (20Nm)

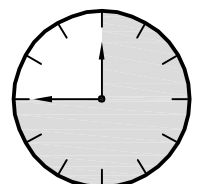

MONTAJ SETİ / INSTALLATION SET

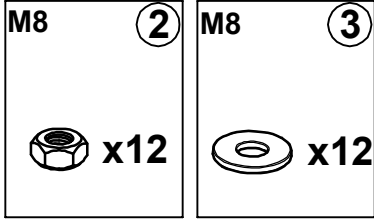

1. M8 SOMUN / M8 NUT
2. M8 PUL / M8 WASHER

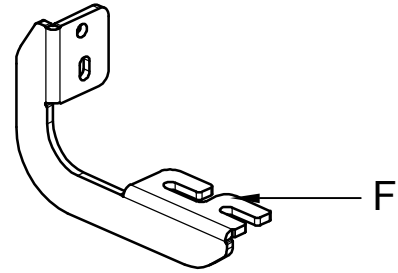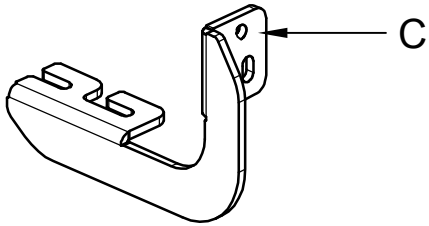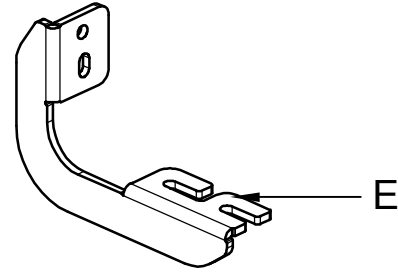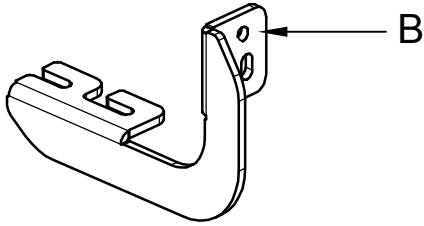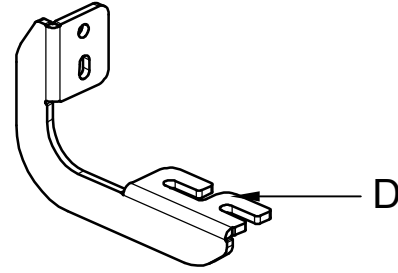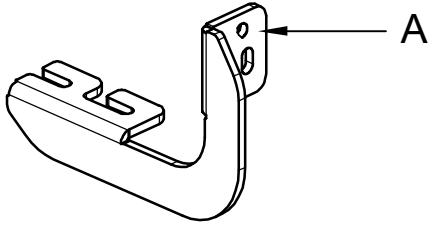

BRAKETLER / BRACKETS

A. 5003BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET

B. 5003BRK R M / SAĞ ORTA BRAKET / RIGHT MIDDLE BRACKET

C. 5003BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET

D. 5003BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET

E. 5003BRK L M / SOL ORTA BRAKET / LEFT MIDDLE BRACKET

F. 5003BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1



RESİMDEKİ YERLERE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 4



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 2



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 5



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 6



BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS



MONTAJ ŞEMASI / INSTALLATION SCHEME

