

NISSAN X-TRAIL 2014>


KOD / CODE : 5025BRK173




SW10 (15Nm)




SW13 (30Nm)

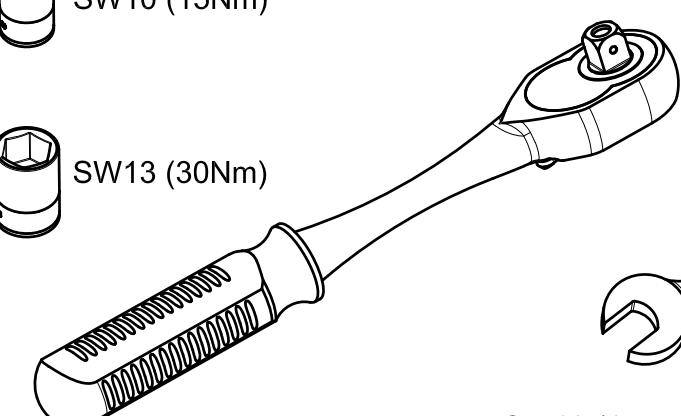







SW13 (30Nm)

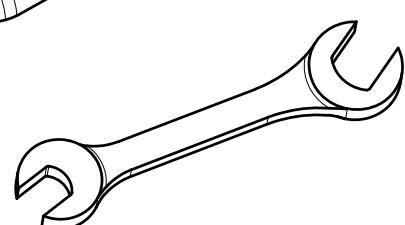

SW10 (15Nm)

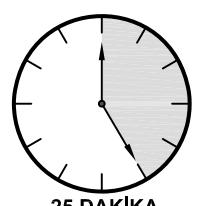

MONTAJ SETİ / INSTALLATION SET

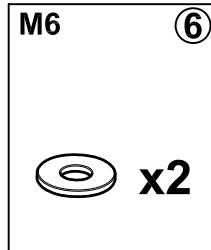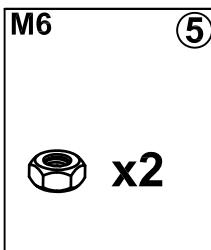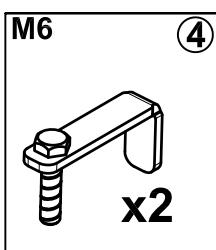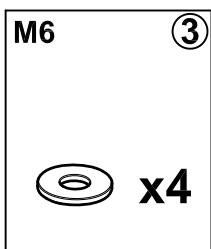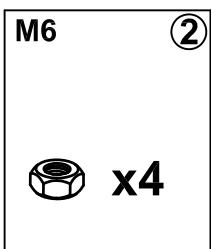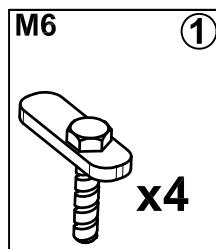

1. M6 LAMALI CİVATA / M6 MOUNTING PLATE

2. M6 SOMUN / M6 NUT

3. M6 PUL / M6 WASHER

4. M8 LAMALI CİVATA / M8 MOUNTING PLATE

5. M8 SOMUN / M8 NUT

6. M8 PUL / M8 WASHER


BRAKETLER / BRACKETS

A. 5025BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET


B. 5025BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET

C. 5025BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET


D. 5025BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

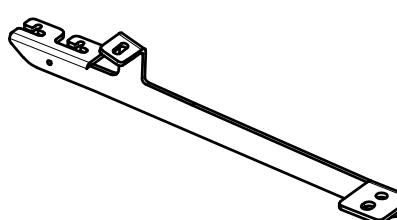


A

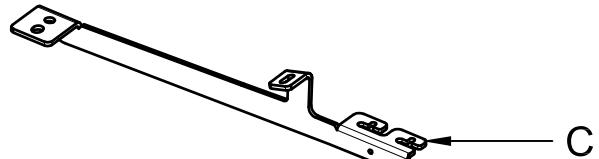

C

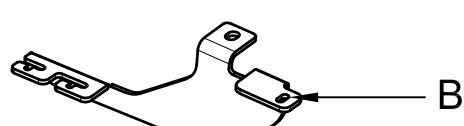

B

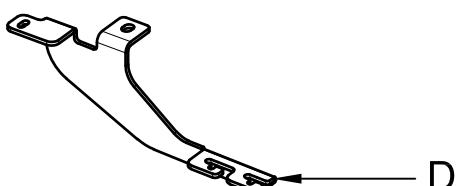

D

Fig. 1



ARAÇ ÜZERİNDEKİ CİVATALARI SÖKÜNÜZ
REMOVE THE BOLTS ON THE VEHICLE

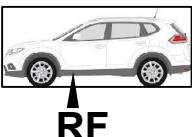


Fig. 5



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 5




ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 2



1-4 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1-4) TO THE PLACE SHOWN ABOVE

Fig. 6

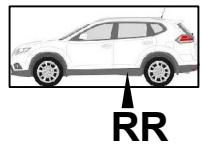


1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1) TO THE PLACE SHOWN ABOVE

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 7

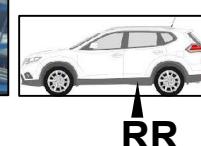

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 4



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

Fig. 8



MONTAJ ŞEMASI / INSTALLATION SCHEME

