

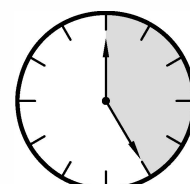


# TORRES 2022>





KOD / CODE : 6719BRK183

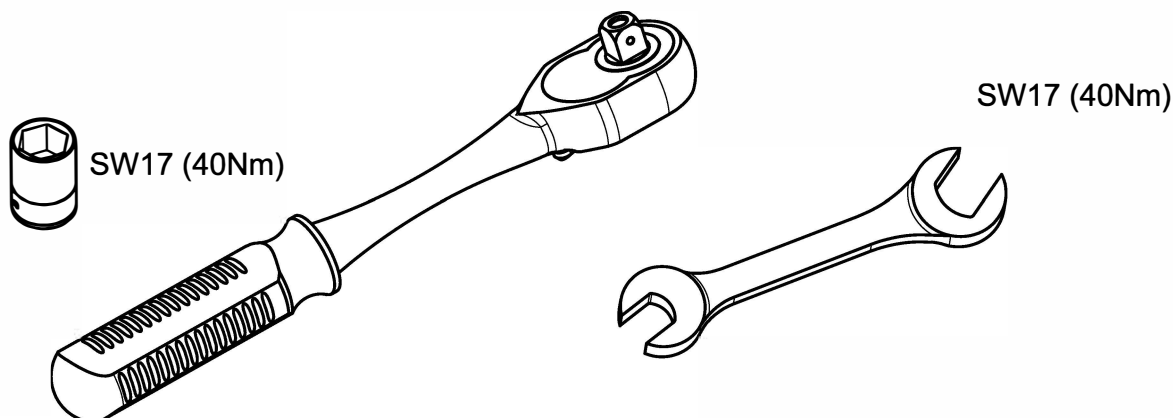

# MONTAJ SETİ / INSTALLATION SET

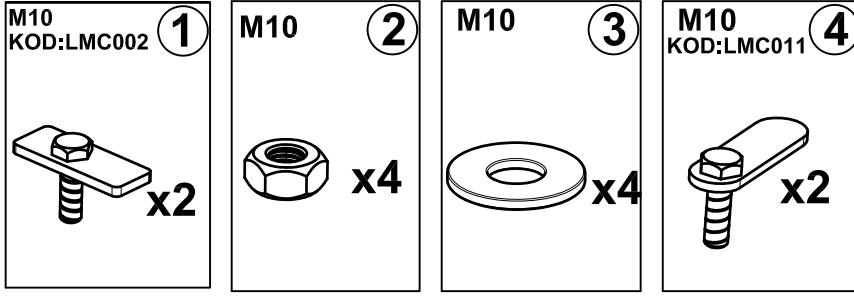


1. M10 LAMALI CİVATA / M10 MOUNTING PLATE
2. M10 SOMUN / M10 NUT
3. M10 PUL / M10 WASHER
4. M10 LAMALI CİVATA / M10 MOUNTING PLATE

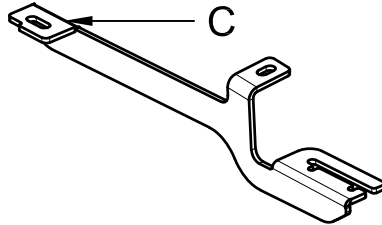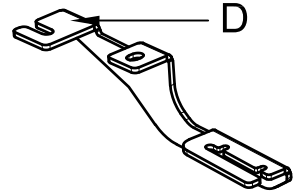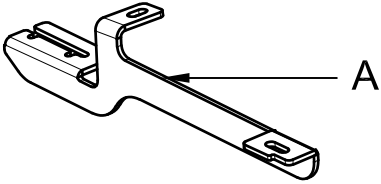

## BRAKETLER / BRACKETS

- A. 6719BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 6719BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 6719BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 6719BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET


Fig. 1

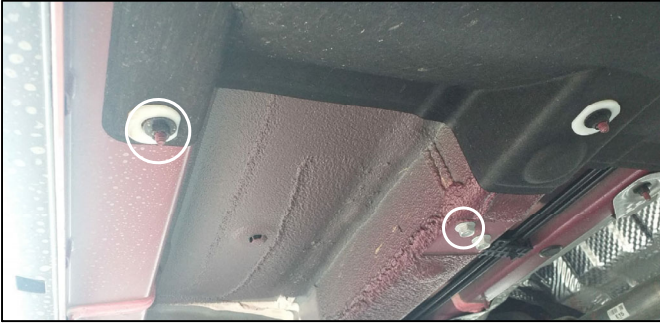

ARAÇ ÜZERİNDEKİ SOMUNLARI SÖKÜNÜZ.  
PLEASE REMOVE THE STOPPER THAT  
ALREADY ATTACHED ON THE VEHICLE



Fig. 5

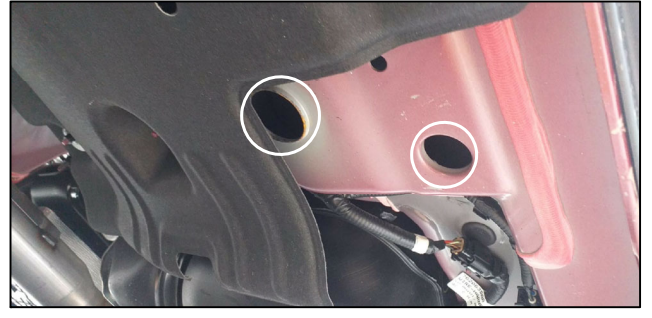

ARAÇ ÜZERİNDEKİ TAPALARI SÖKÜNÜZ.  
PLEASE REMOVE THE STOPPER THAT  
ALREADY ATTACHED ON THE VEHICLE



Fig. 2



BRACKETLERİN ARAÇ ÜZERİNDEKİ YERLERİDİR  
PLEASE INSTALL THE BRACKETS UNDER THE CAB  
LIKE IN THE FOLLOWING PICTURE



Fig. 6



1-4 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 1)  
TO THE PLACE SHOWN ABOVE



Fig. 3



BRACKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS




Fig. 7



BRACKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



Fig. 4

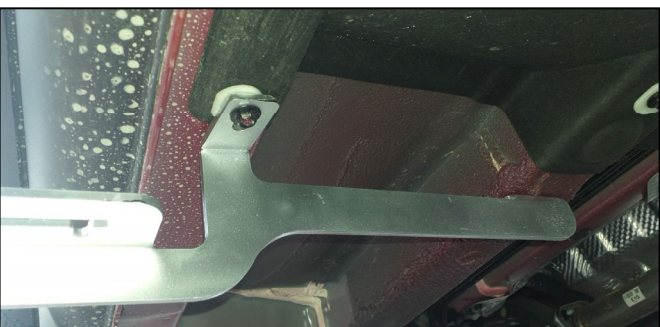

BRACKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



Fig. 8



BRACKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS





## MONTAJ ŞEMASI / INSTALLATION SCHEME

