



MG
ZS EV 2021>
BENZİNLİ GASOLINE
KOD / CODE : 7302BRK173



SW10 (20Nm)




SW13 (40Nm)

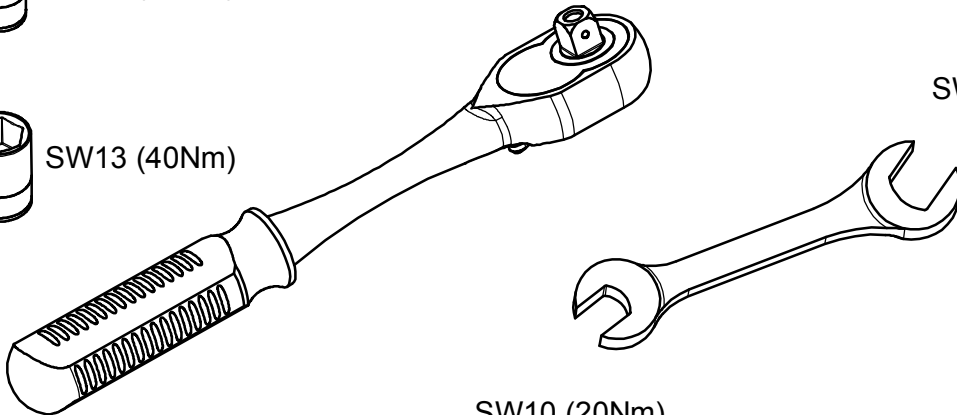


SW13 (40Nm)


SW10 (20Nm)

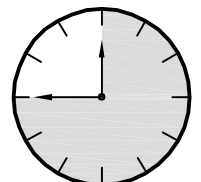

MONTAJ SETİ / INSTALLATION SET

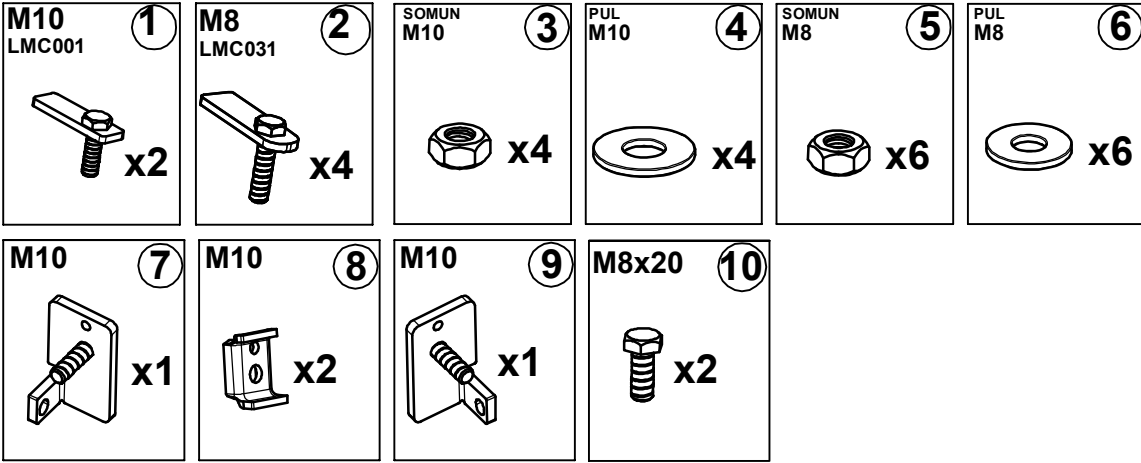

1. M10 LAMALI CİVATA / M10 COTTER BOLT
2. M8 LAMALI CİVATA / M8 COTTER BOLT
3. M10 SOMUN / M10 NUT
4. M10 PUL / M10 WASHER
5. M8 SOMUN / M8 NUT
6. M8 PUL / M8 WASHER

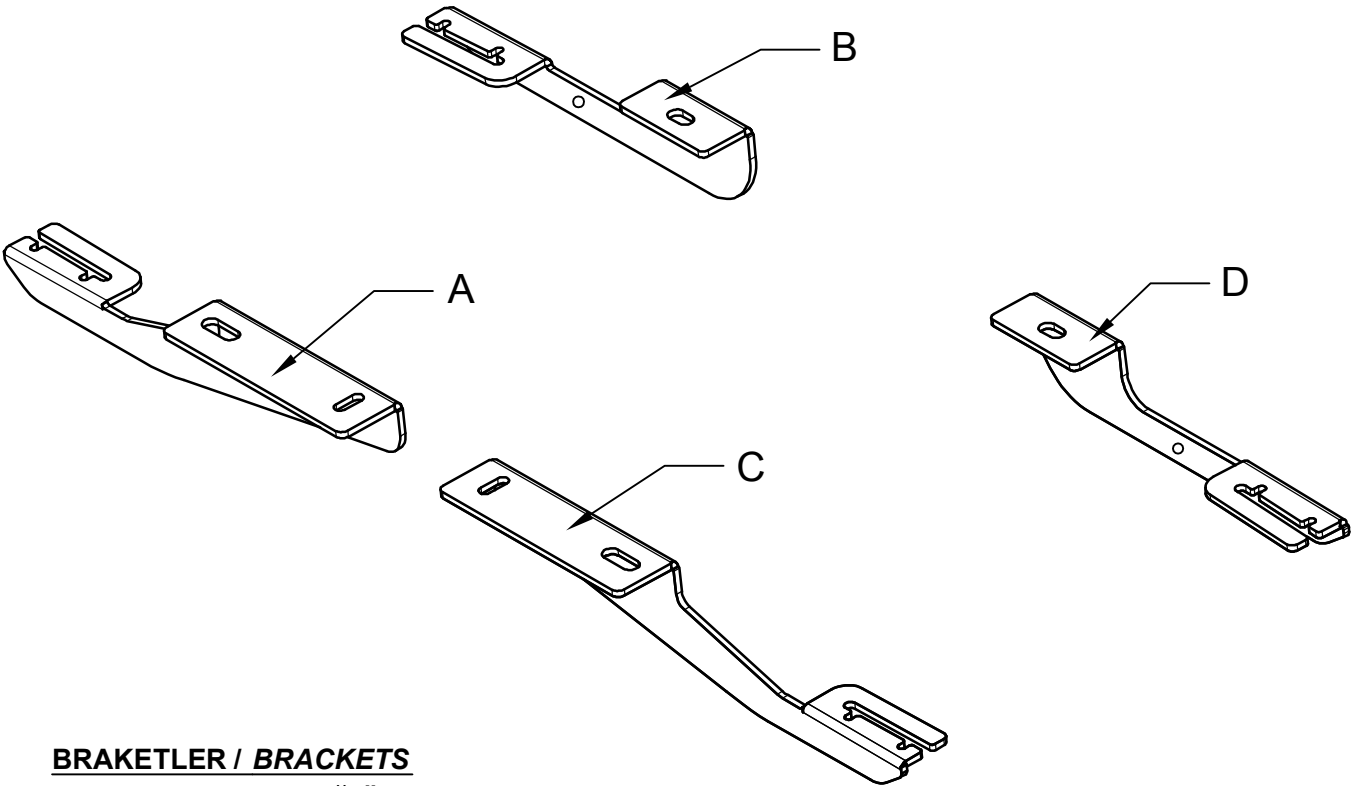

BRAKETLER / BRACKETS

- A. 7302BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 7302BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 7302BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 7302BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

1



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

RF

1



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

RR

2



2 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART 2 TO THE PLACE SHOWN ABOVE

RF

2



1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART 1 TO THE PLACE SHOWN ABOVE

RF

3



BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS

RF

3



BRAKETİ YERİNE TAKINIZ
INSTALL THE BRACKET WITH BOLTS

RR

MONTAJ SETİ / INSTALLATION SET



MONTAJ ŞEMASI / INSTALLATION SCHEME

