



VOLKSWAGEN AMAROK 2010>


KOD / CODE : 7535BRK203

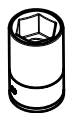

SW13 (20Nm)


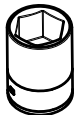


SW17 (40Nm)

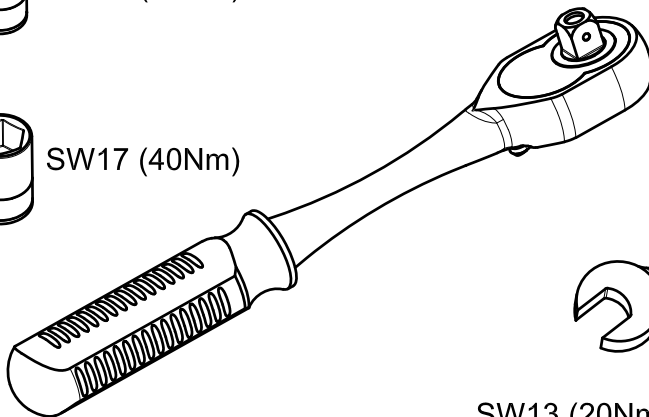


SW13 (20Nm)





SW17 (40Nm)

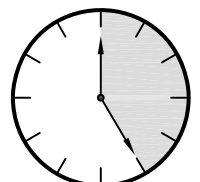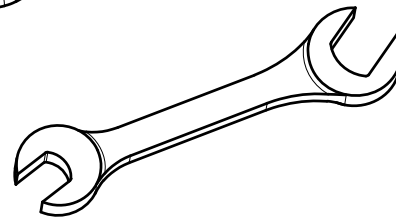

MONTAJ SETİ / INSTALLATION SET

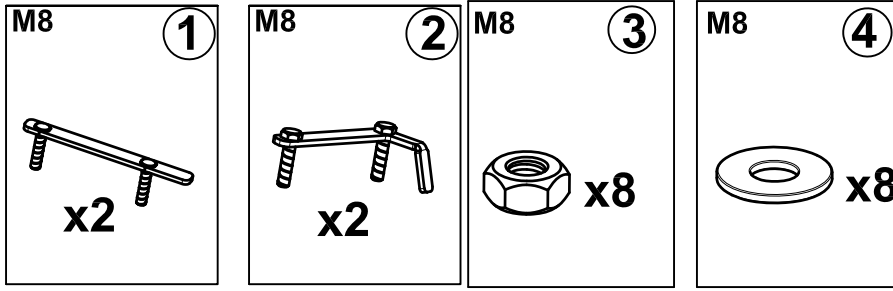


1. M8 LAMALI CİVATA / M8 MOUNTING PLATE
2. M8 LAMALI CİVATA / M8 MOUNTING PLATE
3. M8 SOMUN / M8 NUT
4. M8 PUL / M8 WASHER

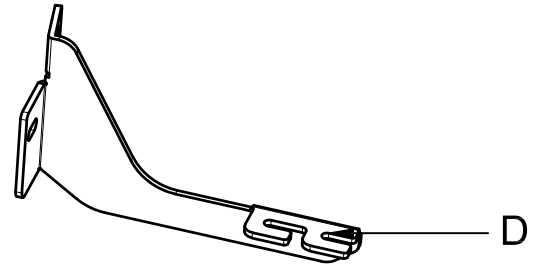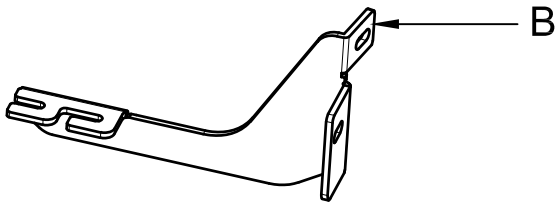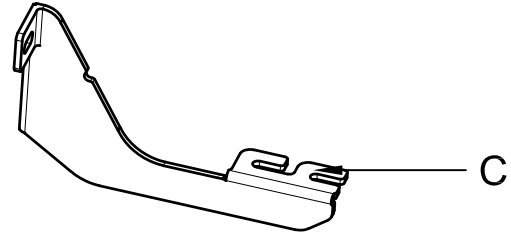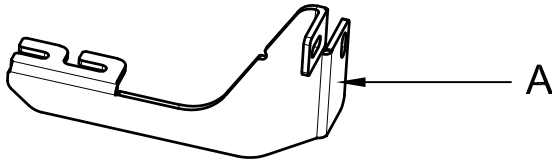

BRAKETLER / BRACKETS

- A. 7535BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 7535BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 7535BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 7535BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1

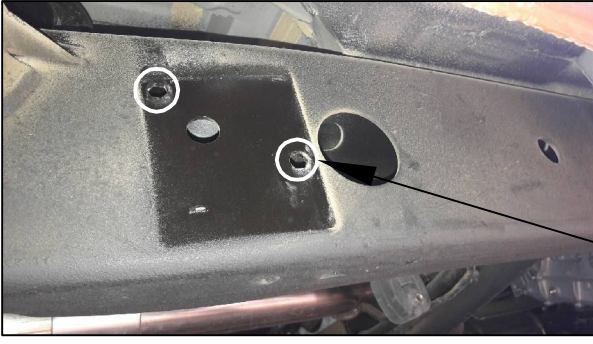

RR



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

Fig. 5




RF



ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE


Fig. 2

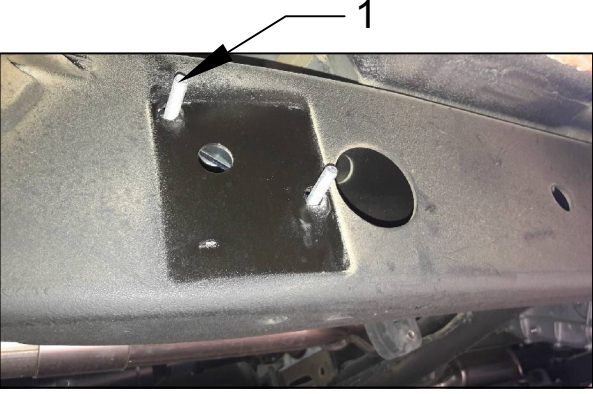

RR

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE

Fig. 6

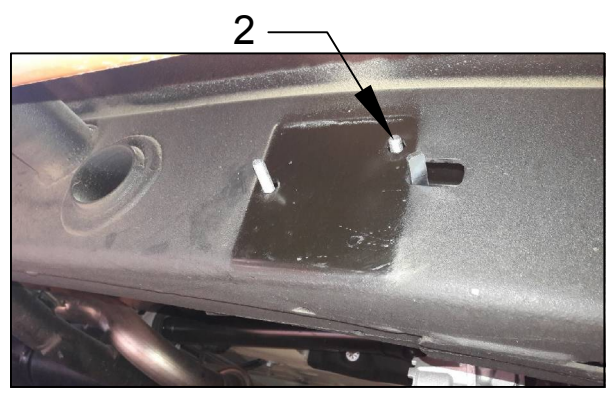

RF

2 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 2)
TO THE PLACE SHOWN ABOVE

Fig. 3



RR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS


Fig. 7



RF

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 4

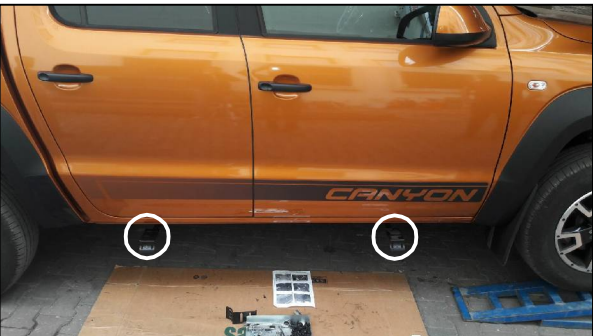

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 8



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT



MONTAJ ŞEMASI / INSTALLATION SCHEME

