



# VW CADDY 2021



KOD / CODE : 7566BLY101




SW17 (40Nm)

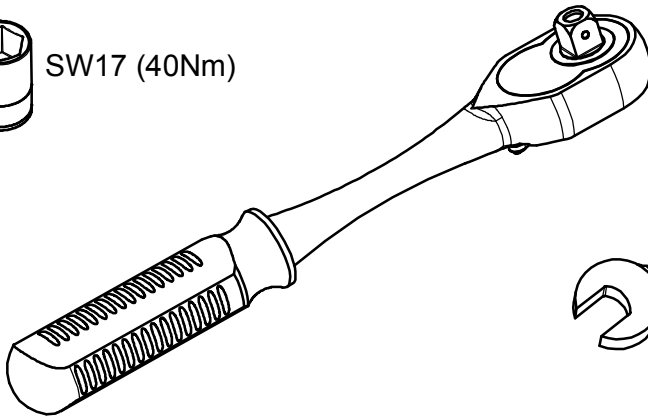


SW17 (40Nm)

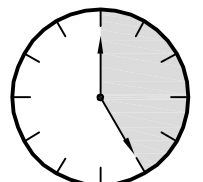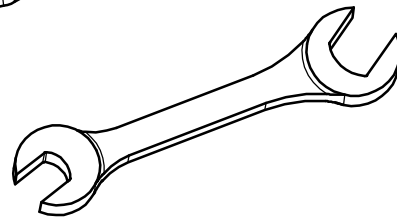

# MONTAJ SETİ / INSTALLATION SET

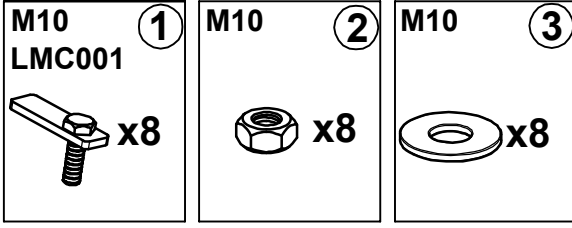

1. M10 LAMALI CİVATA / M10 MOUNTING PLATE
2. M10 SOMUN / M10 NUT
3. M10 PUL / M10 WASHER
4. M8 SOMUN / M8 NUT
5. M8 PUL / M8 WASHER

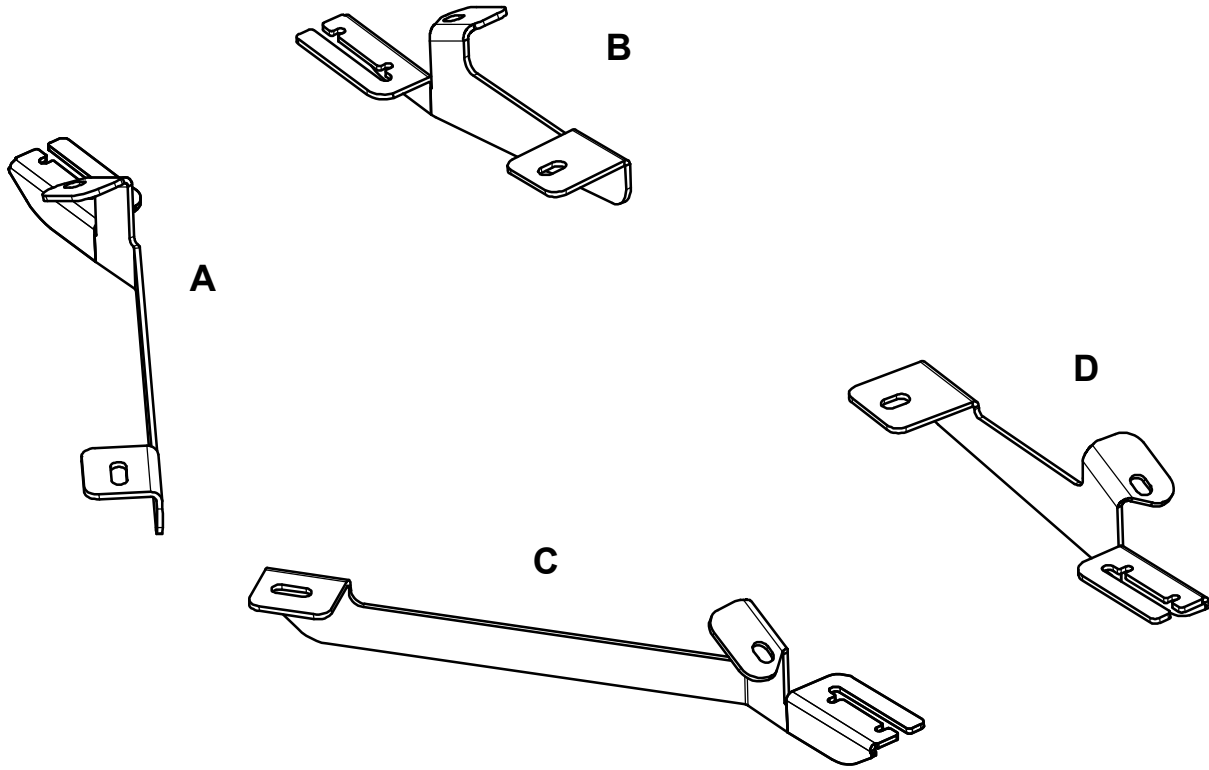

## BRAKETLER / BRACKETS

- A. 7566BRK R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 7566BRK R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET
- C. 7566BRK L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- D. 7566BRK L R / SOL ARKA BRAKET / LEFT REAR BRACKET


Fig. 1



**LF**

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT ALREADY  
ATTACHED ON THE VEHICLE

Fig. 5

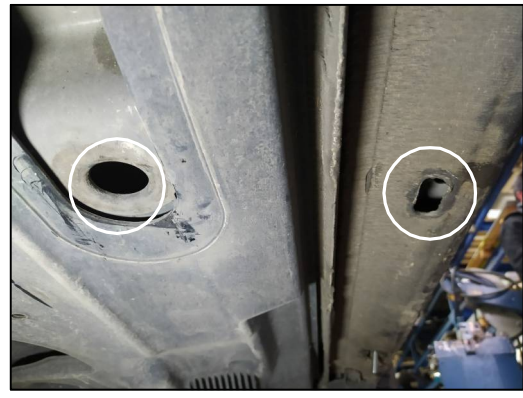

**LR**

1 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 1)  
TO THE PLACE SHOWN ABOVE


Fig. 2



**LF**

1 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 1)  
TO THE PLACE SHOWN ABOVE

Fig.

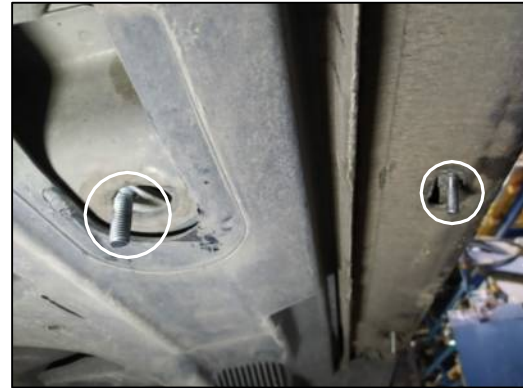

**LR**

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS

Fig. 3



**LF**

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS

Fig. 7



**LR**

1 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 1)  
TO THE PLACE SHOWN ABOVE

Fig. 4



**LF**

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT ALREADY  
ATTACHED ON THE VEHICLE

Fig. 8



**LR**

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



## MONTAJ ŞEMASI / INSTALLATION SCHEME

