


# DACIA DUSTER 2018>


KOD / CODE : 2025DKY212

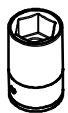

SW13 (20Nm)




SW15 (40Nm)

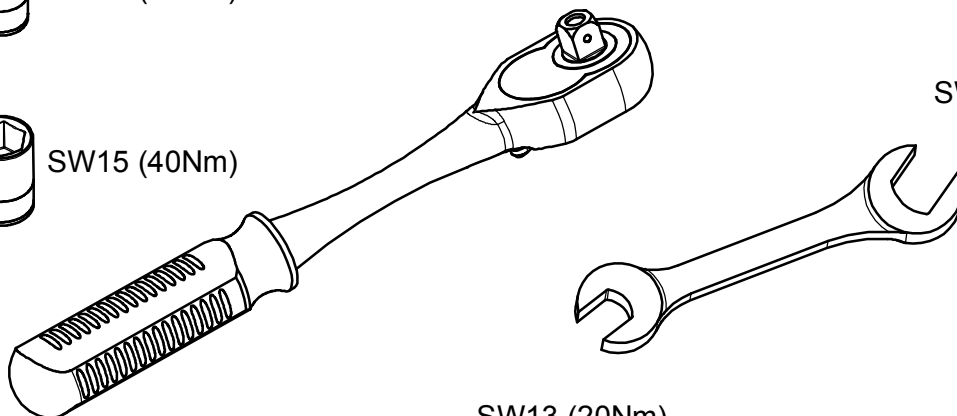


SW13 (20Nm)

SW15 (40Nm)

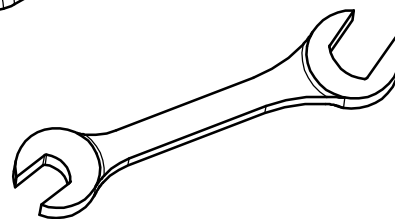


Version: 1.02 May 2019

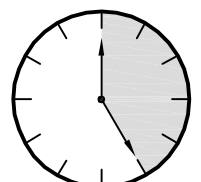

25 DAKIKA

# MONTAJ SETİ / INSTALLATION SET


M10 ① x2	M10 ② x4	M10 ③ x2	M8 ④ x2	M10 ⑤ x4	M8x20 ⑥ x4
M10 ⑦ x8	M10 ⑧ x8	M8 ⑨ x8	M8 ⑩ x8	M10x20 FLANGED ⑪ x12	M10 FLANGED ⑫ x12

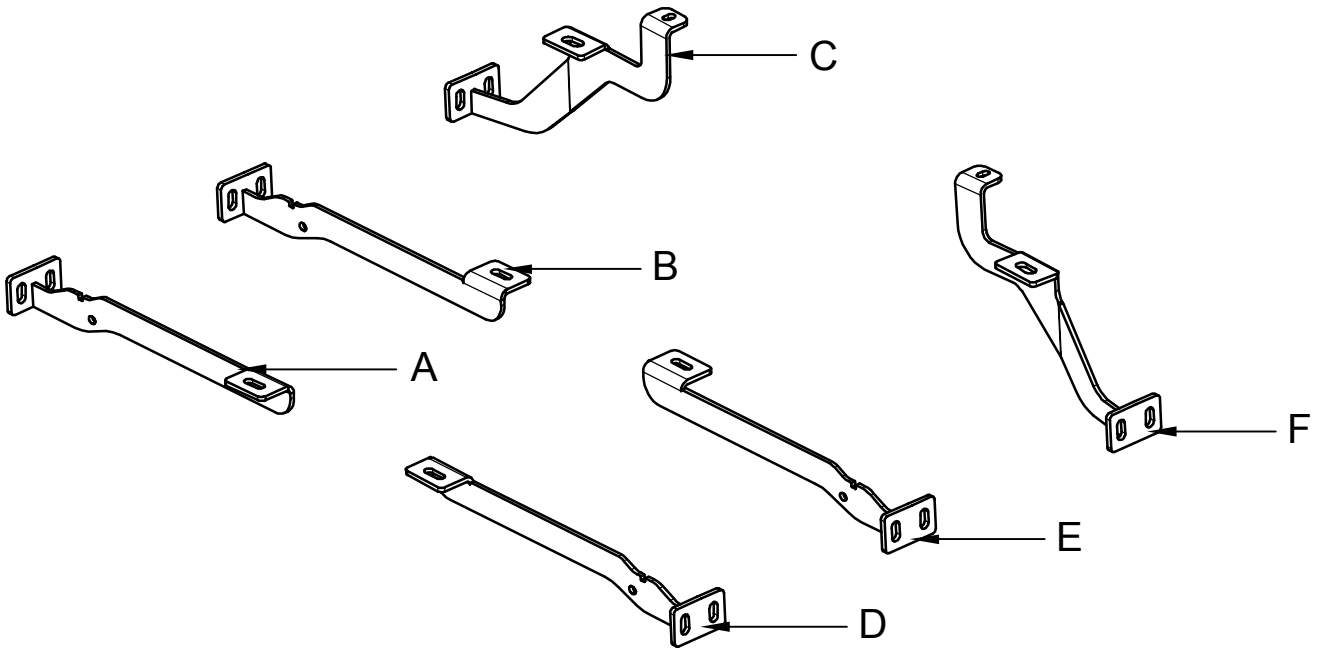

## **BRAKETLER / BRACKETS**

- A. 2025DKY R F / SAĞ ÖN BRAKET / *RIGHT FRONT BRACKET*
- B. 2025DKY R M / SAĞ ORTA BRAKET / *RIGHT MIDDLE BRACKET*
- C. 2025DKY R R / SAĞ ARKA BRAKET / *RIGHT ARKA BRACKET*
- D. 2025DKY L R / SOL ÖN BRAKET / *LEFT FRONT BRACKET*
- E. 2025DKY L F / SOL ORTA BRAKET / *LEFT MIDDLE BRACKET*
- F. 2025DKY L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*

Fig. 1

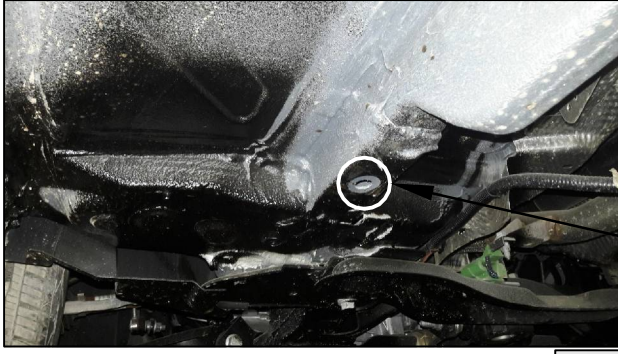

ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT  
ALREADY ATTACHED ON THE VEHICLE



LF

Fig. 5



ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT  
ALREADY ATTACHED ON THE VEHICLE



LM

Fig. 3



4

4 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 4)  
TO THE PLACE SHOWN ABOVE



LF

Fig. 6



5

5 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 5)  
TO THE PLACE SHOWN ABOVE



LM

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



LF

Fig. 7



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



LM

Fig. 4



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



LF

Fig. 8



ÜRÜNÜ MONTAJLAYINIZ  
PLEASE INSTALL THE PRODUCT



LM



Fig. 9



ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT  
ALREADY ATTACHED ON THE VEHICLE



LR

Fig. 1




BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS



LR

Fig. 10

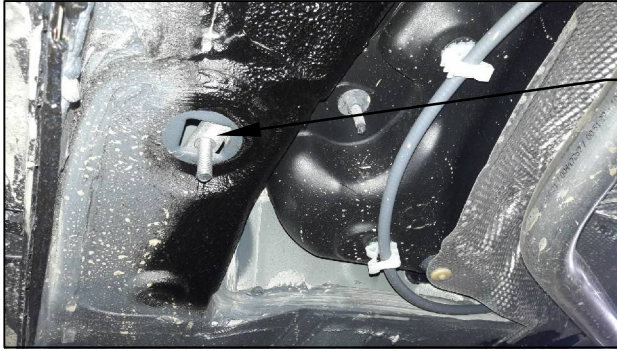

5 NUMARALI PARÇAYI YERİNE TAKINIZ

Fig. 1:



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

## MONTAJ ŞEMASI / INSTALLATION SCHEME

