

NISSAN NAVARA 2006-2015


KOD / CODE : 5003DKY111



SW13 (20Nm)




SW15 (40Nm)

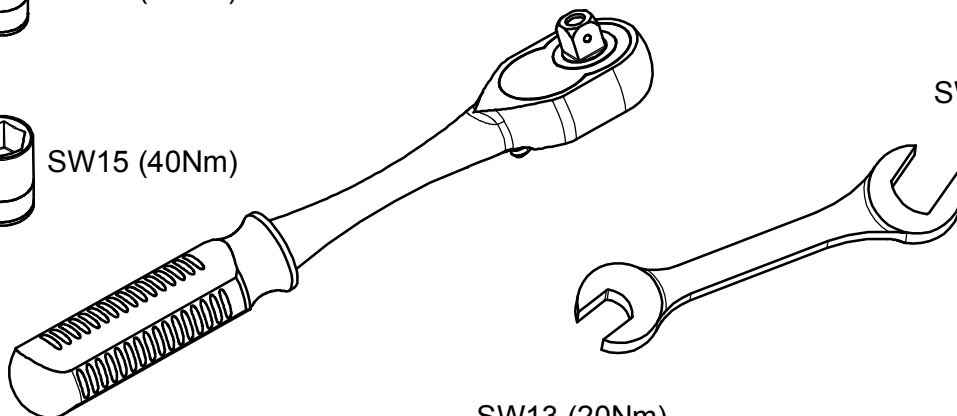


SW15 (40Nm)

SW13 (20Nm)

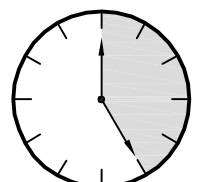


25 DAKIKA

MONTAJ SETİ / INSTALLATION SET

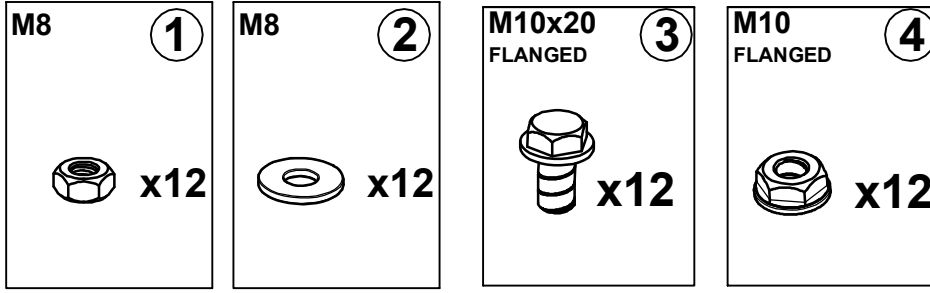

1. M8 SOMUN / M8 NUT
2. M8 PUL / M8 WASHER
3. M10x20 FLANŞLI CİVATA / M10x20 BOLT FLANGED
4. M10 FLANŞLI SOMUN / M10 NUT FLANGED

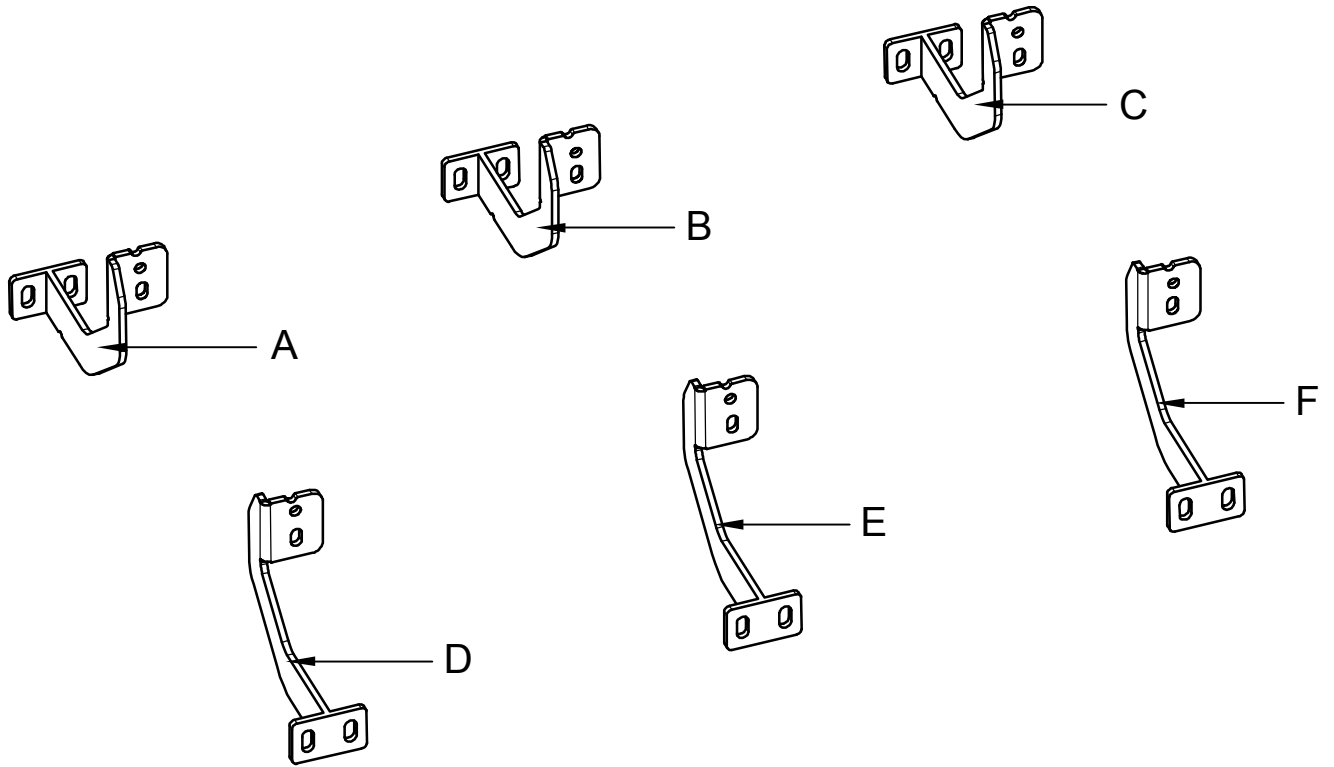

BRAKETLER / BRACKETS

- A. 5003DKY R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 5003DKY R M / SAĞ ORTA BRAKET / RIGHT MIDDLE BRACKET
- C. 5003DKY R R / SAĞ ARKA BRAKET / RIGHT ARKA BRACKET
- D. 5003DKY L R / SOL ÖN BRAKET / LEFT FRONT BRACKET
- E. 5003DKY L F / SOL ORTA BRAKET / LEFT MIDDLE BRACKET
- F. 5003DKY L R / SOL ARKA BRAKET / LEFT REAR BRACKET

Fig. 1



ARAÇ ÜZERİNDEKİ CİVATALAR
BOLTS ON VEHICLE

Fig. 5



ARAÇ ÜZERİNDEKİ CİVATALAR
BOLTS ON VEHICLE

Fig. 2



BRAKETİ RESİMDEKİ GİBİ TAKINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 6




BRAKETİ RESİMDEKİ GİBİ TAKINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 3



BRAKETİ RESİMDEKİ GİBİ TAKINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 7

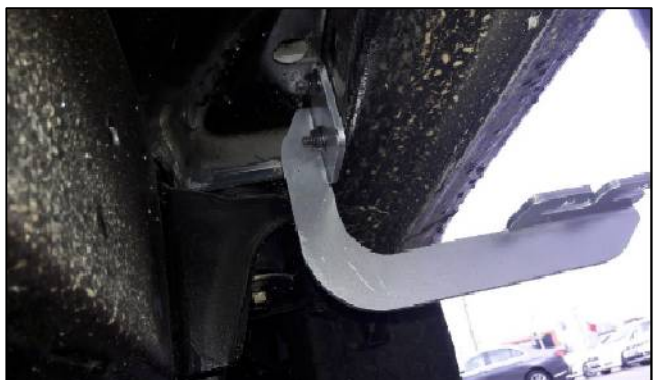


BRAKETİ RESİMDEKİ GİBİ TAKINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 4




1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE

Fig. 8

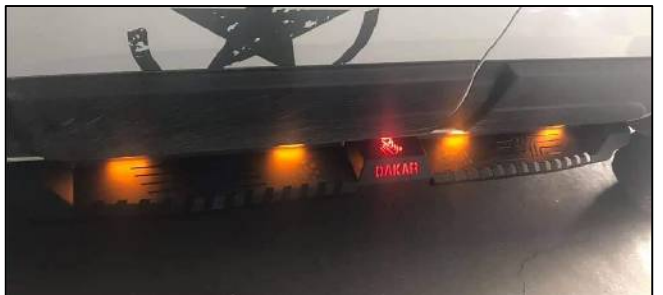

ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

MONTAJ ŞEMASI / INSTALLATION SCHEME

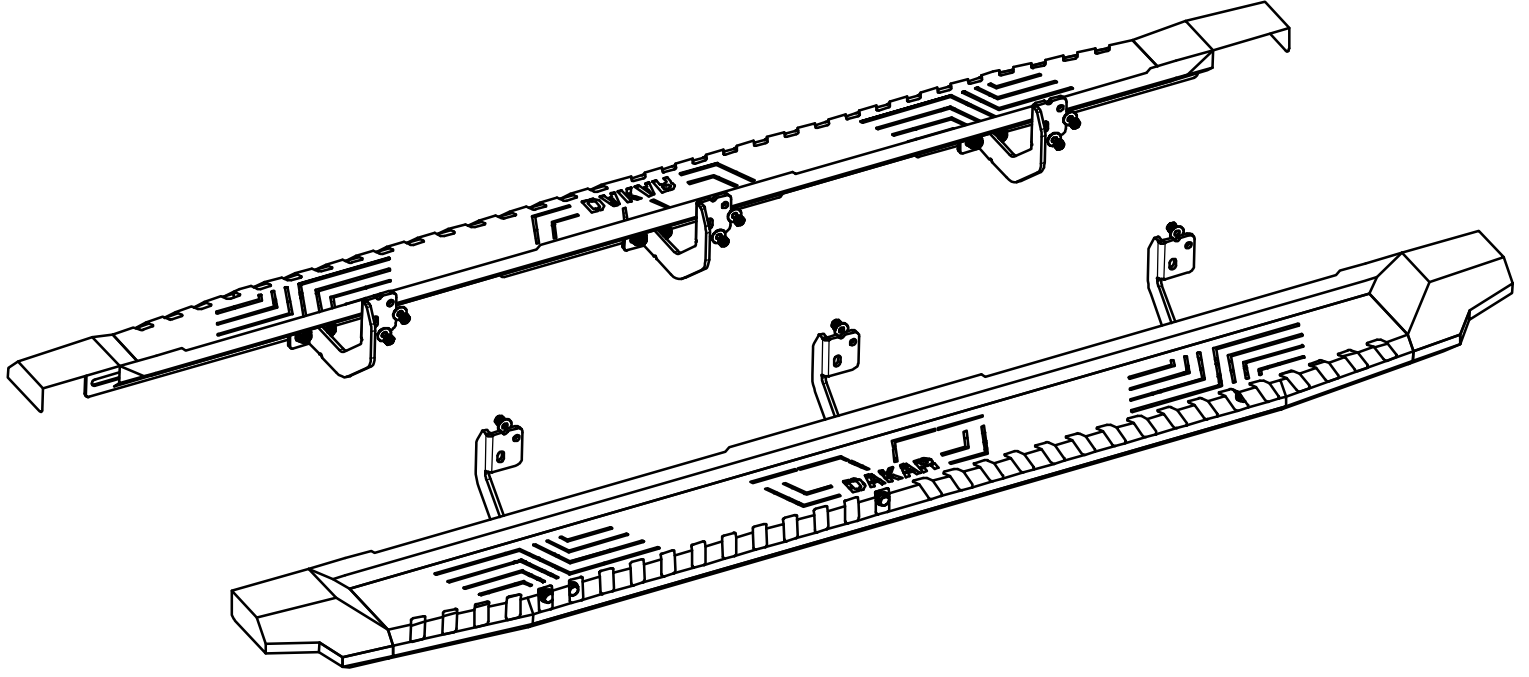

MONTAJ ŞEMASI / INSTALLATION SCHEME

