





VW T-5 2003> VW CARAVELLE 2003>




SW19 (40Nm)

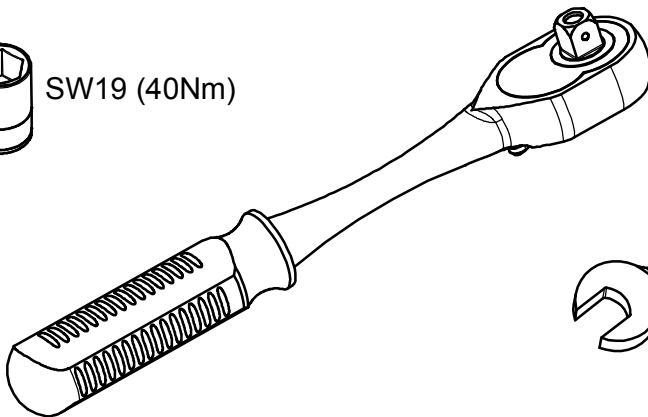



SW19 (55Nm)

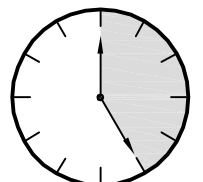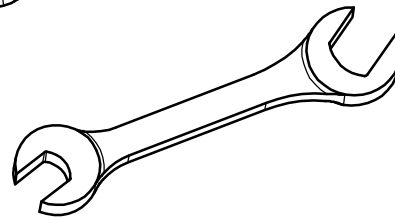

MONTAJ SETİ / *INSTALLATION SET*

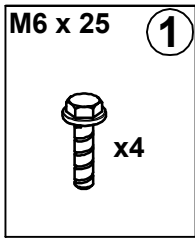

1. M6x25 CİVATA / *M6x25 BOLT*

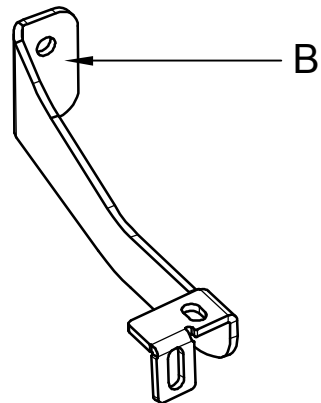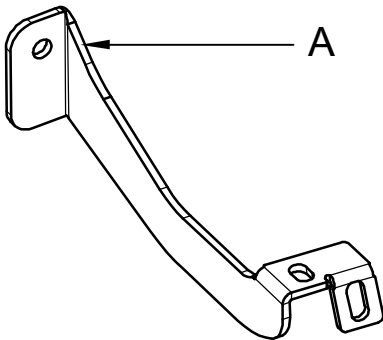

BRACKETLER / BRACKETS

A. 7522OA L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*

B. 7522OA R R / SAĞ ARKA BRAKET / *RIGHT REAR BRACKET*



Fig. 1

▲
LR
LEFT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 4

▲
RR
RIGHT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 2

▲
LR
LEFT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 5

▲
RR
RIGHT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 3

▲
LR
LEFT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 6

▲
RR
RIGHT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



MONTAJ ŞEMASI / INSTALLATION SCHEME

