



SSANGYONG MUSSO 2018>


KOD / CODE : 6714ABA076

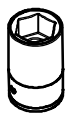

SW10 (20Nm)

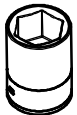


SW17 (40Nm)

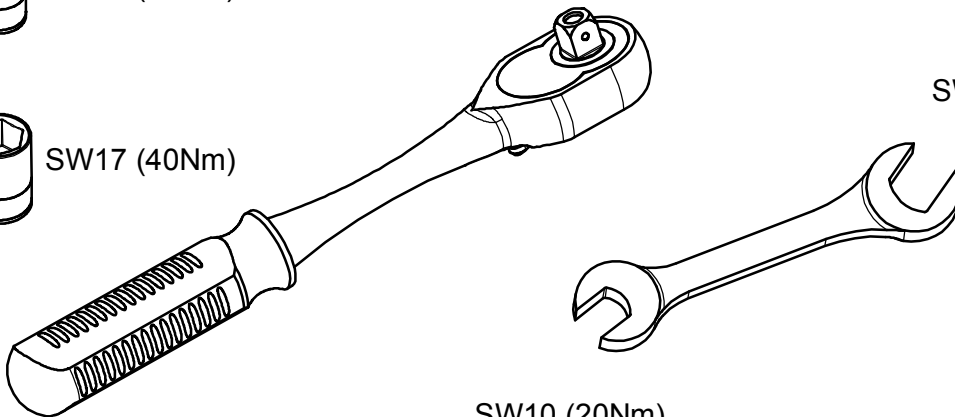


SW17 (40Nm)

SW10 (20Nm)


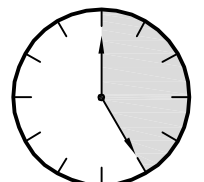


25 DAKİKA

MONTAJ SETİ / INSTALLATION SET

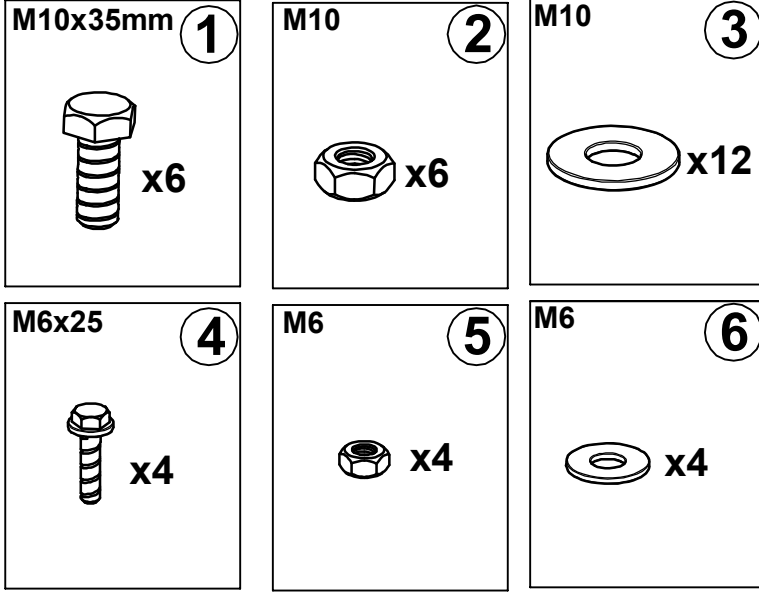

1. M10x35 ANAHTAR BAŞLI CİVATA / M10x35 KEY HEAD BOLT
2. M10 SOMUN / M10 NUT
3. M10 PUL / M10 WASHER
4. M6x25 ANAHTAR BAŞLI CİVATA / M6x25 KEY HEAD BOLT
5. M6 SOMUN / M6 NUT
6. M6 PUL / M6 WASHER

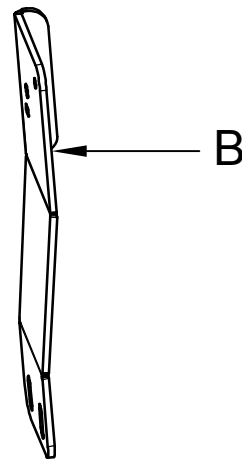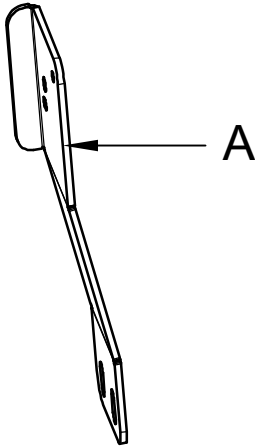

BRAKETLER / BRACKETS

A. 6714ABA L R / SOL ARKA BRAKET / LEFT REAR BRACKET

B. 6714ABA R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET

Fig. 1



▲
LR

ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE

Fig. 2


Fig. 5



▲
RR

ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ
PLEASE REMOVE THE STOPPER THAT ALREADY
ATTACHED ON THE VEHICLE


Fig. 6

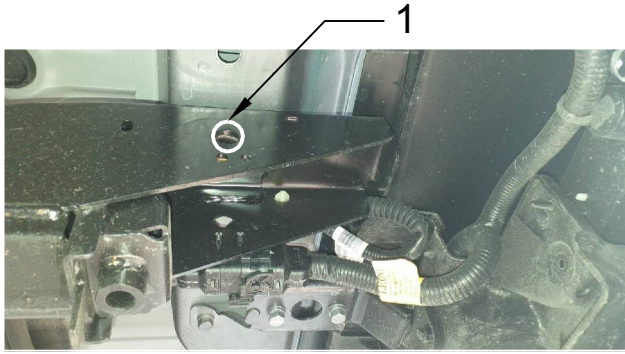

▲
LR

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE


Fig. 3

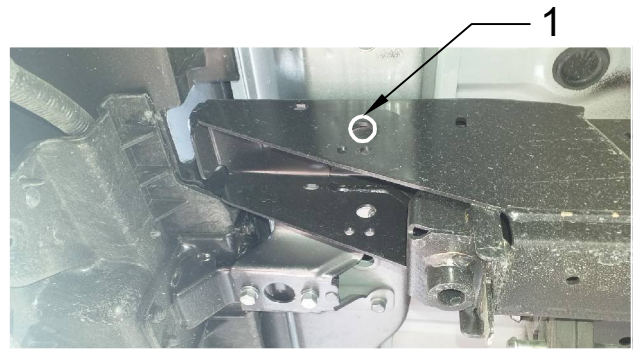

▲
RR

1 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE


Fig. 7

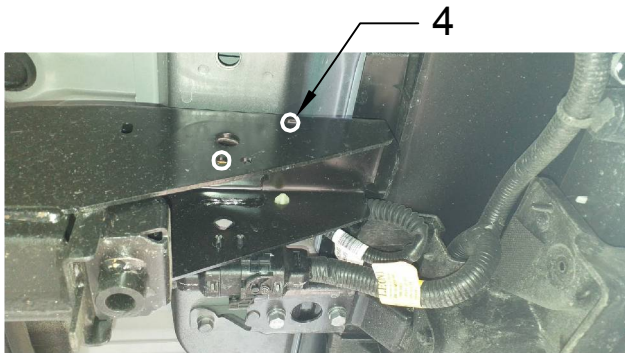

▲
LR

4 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 4)
TO THE PLACE SHOWN ABOVE

Fig. 4

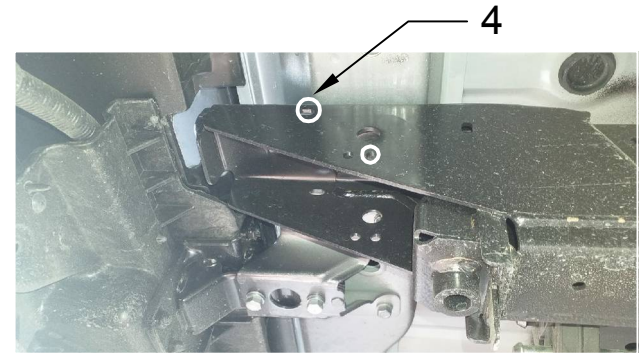

▲
RR

4 NUMARALI PARÇAYI YERİNE TAKINIZ
PLEASE ATTACH THE PART (PART NO 4)
TO THE PLACE SHOWN ABOVE

Fig. 8



▲
LR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

LEFT
REAR



▲
RR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

LEFT
REAR



MONTAJ ŐEMASI / INSTALLATION SCHEME

