



FORD RANGER 2011>


KOD / CODE : 26170KJ101



SW13 (20Nm)




SW15 (40Nm)

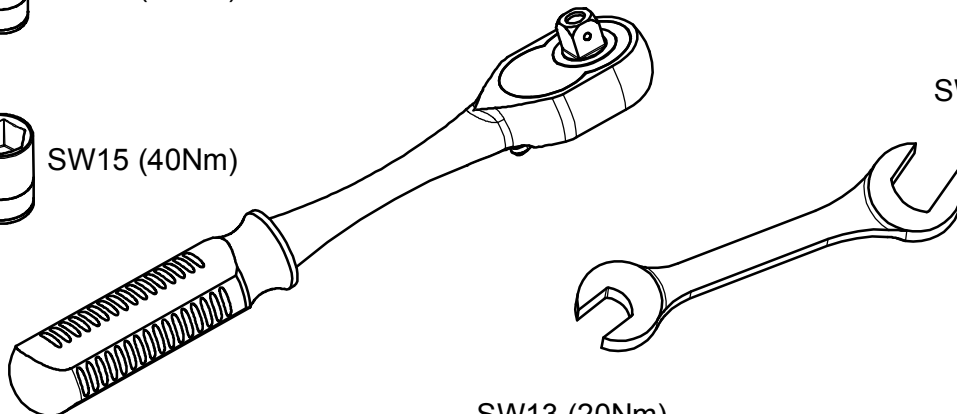

SW15 (40Nm)


SW13 (20Nm)

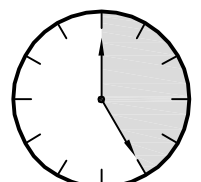

25 DAKİKA

MONTAJ SETİ / INSTALLATION SET

M10x35mm ① x4	M10 ② x8	M10 ③ x4	M6x25 ④ x2	EK ⑤ x1	FLANŞLI CİVATA M8x20mm ⑥ x11
M8 ⑦ x1	M10 ⑧ x2	M10 ⑨ x2	M8 ⑩ x1	M8 ⑪ x1	MERCİMEK ALYAN M6x10mm ⑫ x2

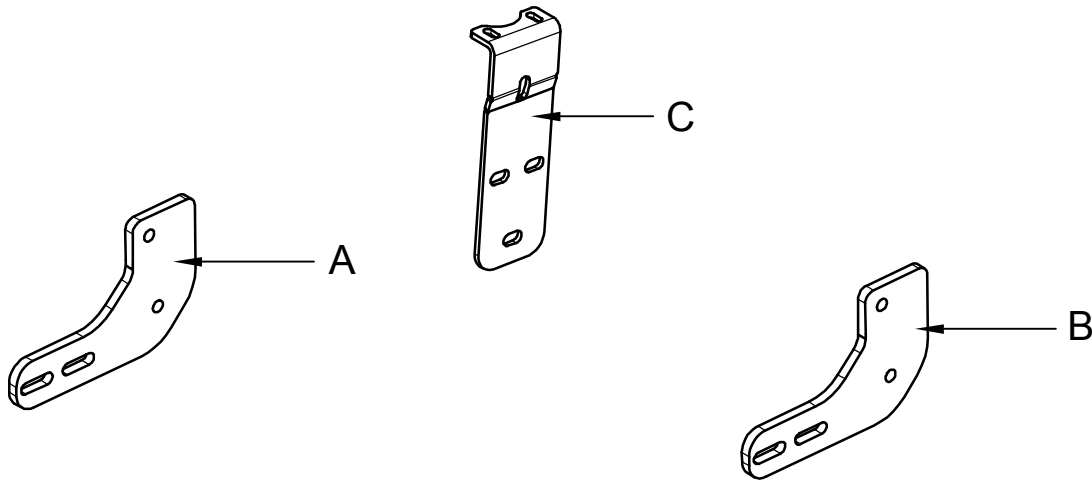

BRAKETLER / BRACKETS

A. 2617ÖKP R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET

B. 2617ÖKP L F / SOL ÖN BRAKET / LEFT FRONT BRACKET

C. 2617ÖKP EK / EK BRAKET / ADDITIONAL BRACKET

Fig. 1



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 5



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE


Fig. 2



6 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 6) TO THE PLACE SHOWN ABOVE

Fig. 6

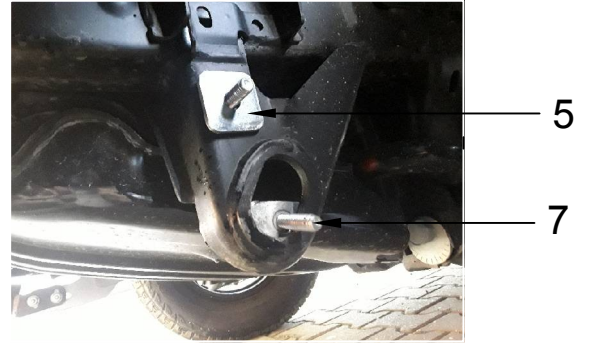

5-7 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 5-7) TO THE PLACE SHOWN ABOVE

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

Fig. 7



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

4 4



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT

Fig. 4

Fig. 8



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT



MONTAJ ŞEMASI / INSTALLATION SCHEME

