



FORD RANGER 2016>


KOD / CODE : 2617ÖKP176



SW13 (20Nm)




SW17 (40Nm)

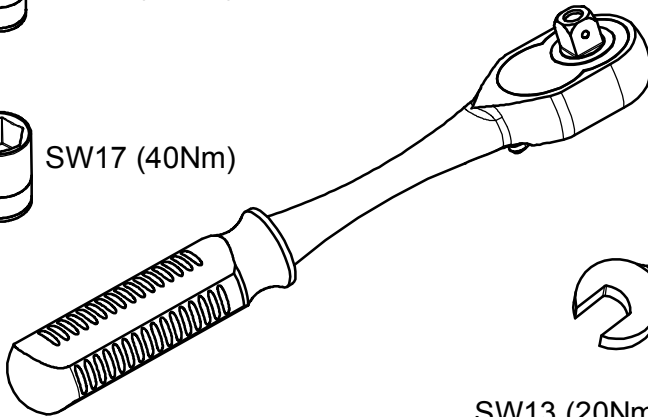


SW17 (40Nm)

SW13 (20Nm)

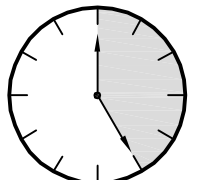


25 DAKİKA

MONTAJ SETİ / INSTALLATION SET

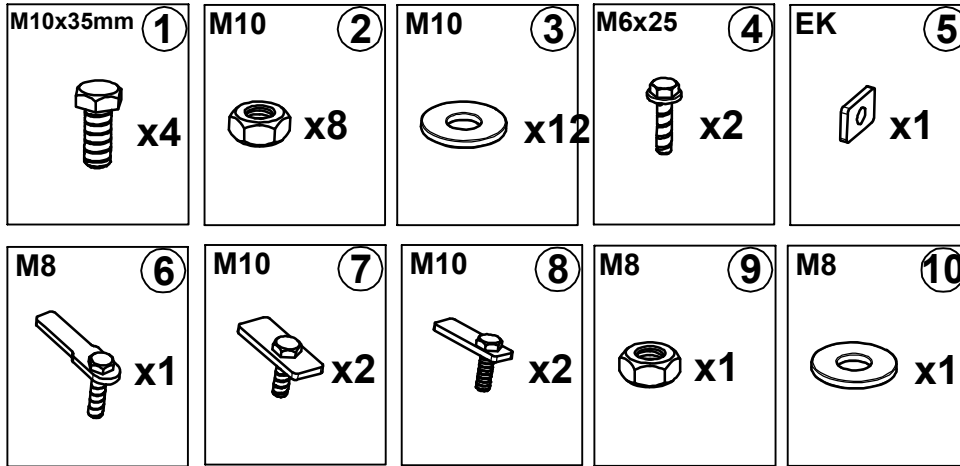

1. M10x35mm CİVATA / M10x35 BOLT
2. M10 SOMUN / M10 NUT
3. M10 PUL / M10 WASHER
4. M6x25mm CİVATA / M6x25 BOLT
5. EK / ADDITIONAL
6. M10 LAMALI CİVATA / M10 MOUNTING PLATE
7. M8 LAMALI CİVATA / M8 MOUNTING PLATE
8. M8 LAMALI CİVATA / M8 MOUNTING PLATE
9. M8 SOMUN / M8 NUT
10. M8 PUL / M8 WASHER

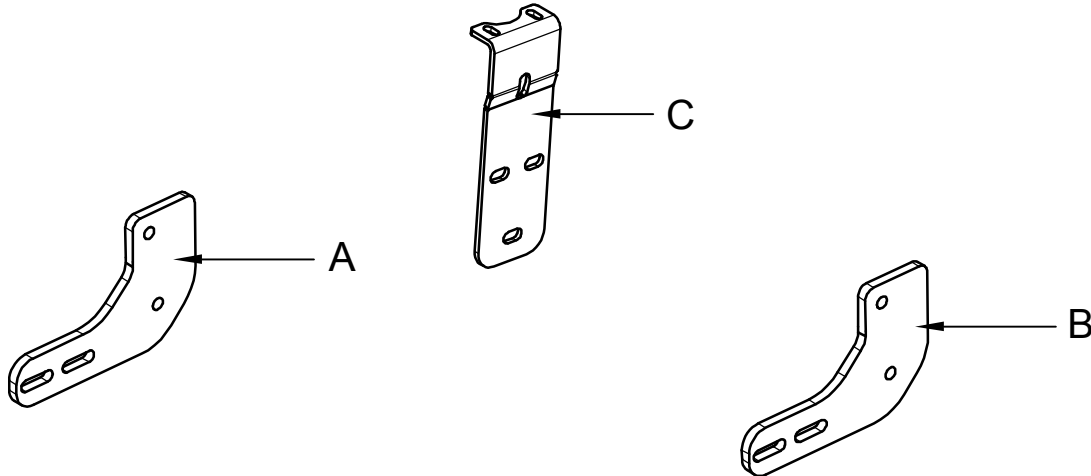

BRAKETLER / BRACKETS

- A. 2617ÖKP R F / SAĞ ÖN BRAKET / RIGHT FRONT BRACKET
- B. 2617ÖKP L F / SOL ÖN BRAKET / LEFT FRONT BRACKET
- C. 2617ÖKP EK / EK BRAKET / ADDITIONAL BRACKET


Fig. 1



ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

Fig. 5

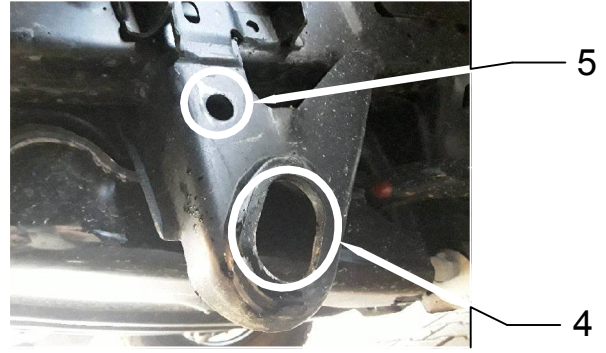

ARAÇ ÜZERİNDEKİ PLASTİK MUHAFAZAYI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE


Fig. 2



6 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 6) TO THE PLACE SHOWN ABOVE

Fig. 6

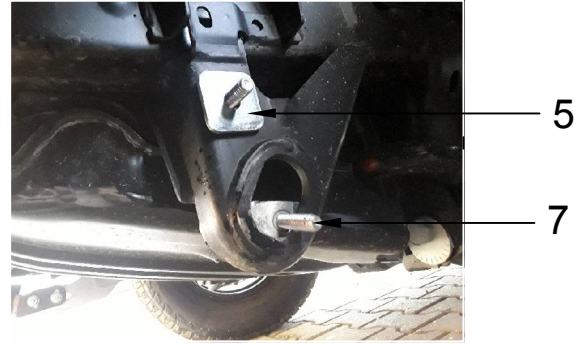

5-7 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 5-7) TO THE PLACE SHOWN ABOVE

Fig. 3



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS


Fig. 7



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

Fig. 4

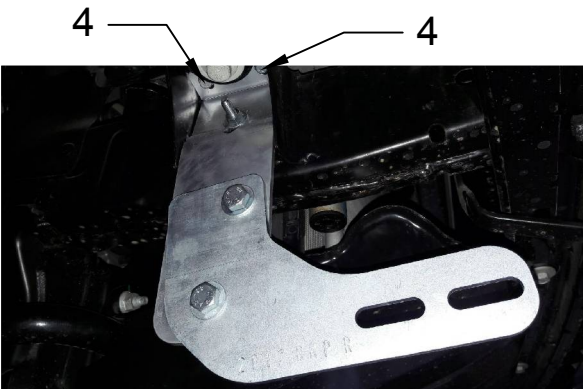

ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT

Fig. 8



ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT



MONTAJ ŞEMASI / INSTALLATION SCHEME

